

## Table of Contents

<b>Chapter</b>	<b>Title</b>	<b>Page</b>
1	System Overview	1
2	CHEETAH Overview & Definitions	5
3	System Modules and Addressable Devices	9
4	Operations	15
5	System Configuring	21
6	Sensor Calibration and Sensitivities	33
7	Installation, Wiring & Start-up	35
8	Operation (door closed)	45
9	Operation (door open, level 1 password)	47
10	Operation (level 2 password)	55
11	Configuration (CSC keypad, level 3 password)	67
12	Operation (Level 4 password - System Administrator)	87
13	Specifications	89
14	Wiring Diagrams	91

<b>Appendix</b>	<b>Title</b>	
1	System Menu Structure	98
2	Cheetah Controller Messages	100
3	Battery Calculations and Forms	105
4	Configuration Forms	106
5	Abort Types	112
6	Anti-Static Procedure	113
7	Error Checking Codes	114
8	Operation Speed Optimization	115
9	System Operation Posting	116
10	Factory Mutual Approved Applications	117

### Notes:

1. Prior to and during handling of modules, follow anti-static rules per Appendix 6.
2. Systems using ARM-III modules (P/N 10-1832) also require 06-106 manual.