

Driver Manual

(Supplement to the FieldServer Instruction Manual)

FS-8705-36

EKM Metering V.3 and V.4 Meters

Serial Driver

TABLE OF CONTENTS

TABLE OF CONTENTS.....	3
EKM Metering V3 V4 Driver Description	5
Driver Scope of Supply	6
1.1 Supplied with this driver.....	6
Hardware Connections.....	7
1.2 Block Diagram.....	7
1.1 Cable Connections	8
1.1.1 <i>FS-1010 and FS-1210 Connections</i>	8
1.1.2 <i>FS-1020 and FS-1220 Connections</i>	9
1.1.3 <i>FSB-3510 Connections</i>	9
1.1.4 <i>Meter Connections</i>	9
Configuring the FieldServer as a EKM Metering V3 V4 Client	10
1.2 Data Arrays.....	11
1.2.5 <i>Data Arrays - Example</i>	11
1.3 Client Side Connections.....	12
1.3.1 <i>Client Side Connection Descriptions - Example</i>	13
1.4 Client Side Nodes.....	14
1.4.1 <i>Client Side Nodes - Example</i>	14
1.5 Client Side Map Descriptors	15
1.5.1 <i>FieldServer Related Map Descriptor Parameters</i>	15
1.5.2 <i>Driver Related Map Descriptor Parameters</i>	16
1.6 Examples.....	18
1.6.1 <i>Map Descriptor Example 1 – Read V.3 Meter</i>	18

1.6.2	<i>Map Descriptor Example 2 – Read V.4</i>	21
1.6.3	<i>Map Descriptor Example 3 – Read V.4 DataB – 2ndary Data Set</i>	24
1.6.4	<i>Map Descriptor Example 4 – Read V.4 6 Months of Data</i>	26
1.6.5	<i>Map Descriptor Example 5 – Control V.4 Relays</i>	28
1.6.6	<i>Map Descriptor Example 6 – Set CT Ratio</i>	29
1.6.7	<i>Map Descriptor Example 7 – Reset</i>	30
1.6.8	<i>Map Descriptor Example 8 – Set Time</i>	31
Configuring the FieldServer as a EKM Metering V3 V4 Server		32
Appendices		33
1.7	Notes on Operation of the Driver.....	33
1.8	Additional Storage Method	33
1.9	Supported Communications functions.....	37
1.10	Password Protected Meters	38
1.11	Revision History	39

EKM Metering V3 V4 Driver Description

This serial driver connects to a trunk of 1 or more (v3 and v4) EKM Meters using RS485. It is capable of reading operational and status data from each meter.

The driver is capable of being linked with other FieldServer drivers to form regular FieldServer firmware that can be installed on QuickServer and other FieldServer gateways. Other drivers can access the EKM Meter data and serve using other protocols such as BACnet and Modbus .

The driver is an active client driver in that it poll's for data – reading or writing data from meters. It cannot be used to simulate and EKM meter. Because only the client side of the protocol is implemented.

The driver is fully compatible with other FieldServer drivers and meets FieldServer's quality assurance standards. The driver was developed by Chipkin Automation Systems, an Approved FieldServer Integrator.

Max Nodes Supported

FieldServer Mode	Nodes	Comments
Client	Many	Number of Meters is determined by vendor and RS485 limitations. Trunks of dozens of devices supported.
Server	0	Not supported or documented.

Driver Scope of Supply


1.1 Supplied with this driver

FieldServer Technologies PART #	Description
Cables	No specific cables are shipped with this driver.
FS-8705-36	Driver Manual.

Hardware Connections

1.2 Block Diagram

Multiple WorkStation protocols and connection supported. See list of FieldServer Drivers.

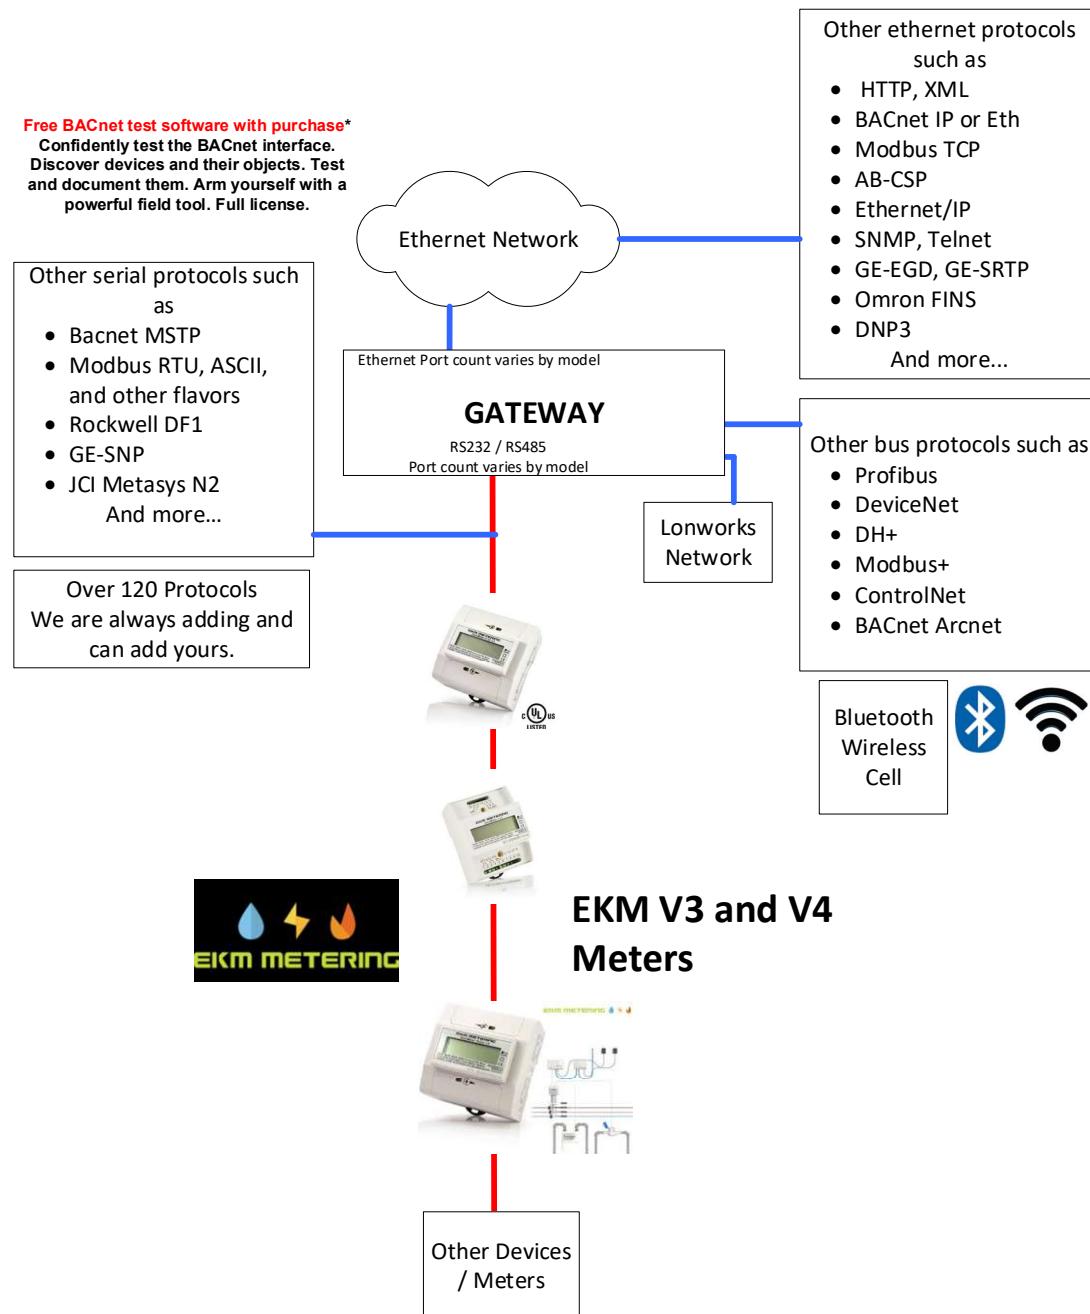

1.1 Cable Connections


1.1.1 FS-1010 and FS-1210 Connections

There are 2x RS485 Ports.

R1 – Top of Unit

R2 = Bottom of Unit (This connection will only be used if you are connecting to 2 separate RS485 trunks)

2 Wire RS485 – often requires the 3rd wire – the signal common wire. We suggest providing a conductor for this purpose but in most cases it will not be required.

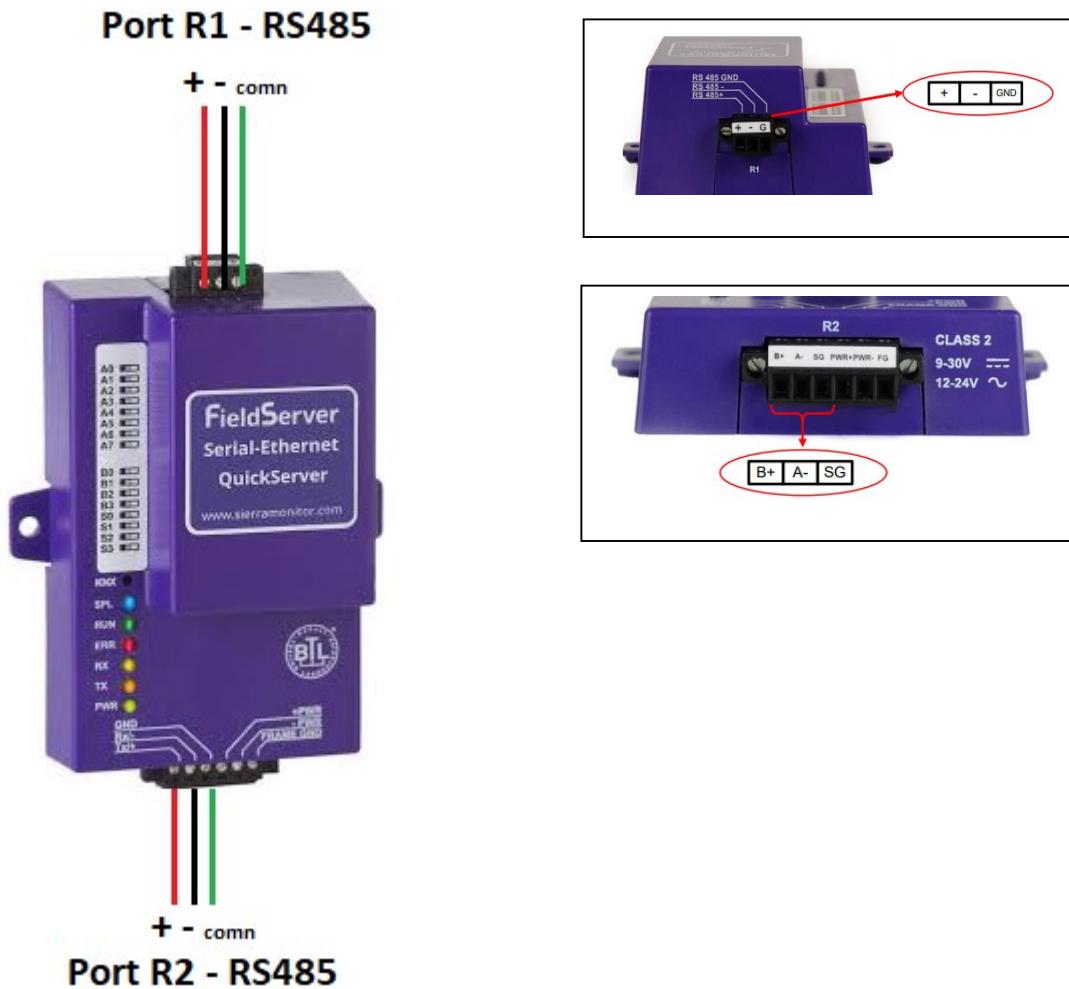


1.1.2 FS-1020 and FS-1220 Connections


There are 1x RS485 Ports identified as R1. See FS-1010 Connection info above for connection info.

R1 – Top of Unit

1.1.3 FSB-3510 Connections

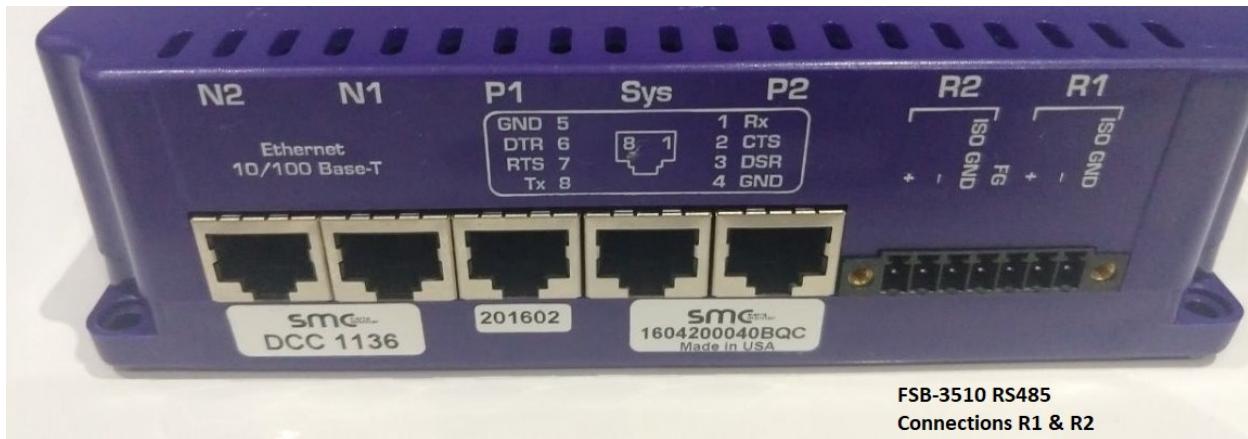

1.1.4 Meter Connections

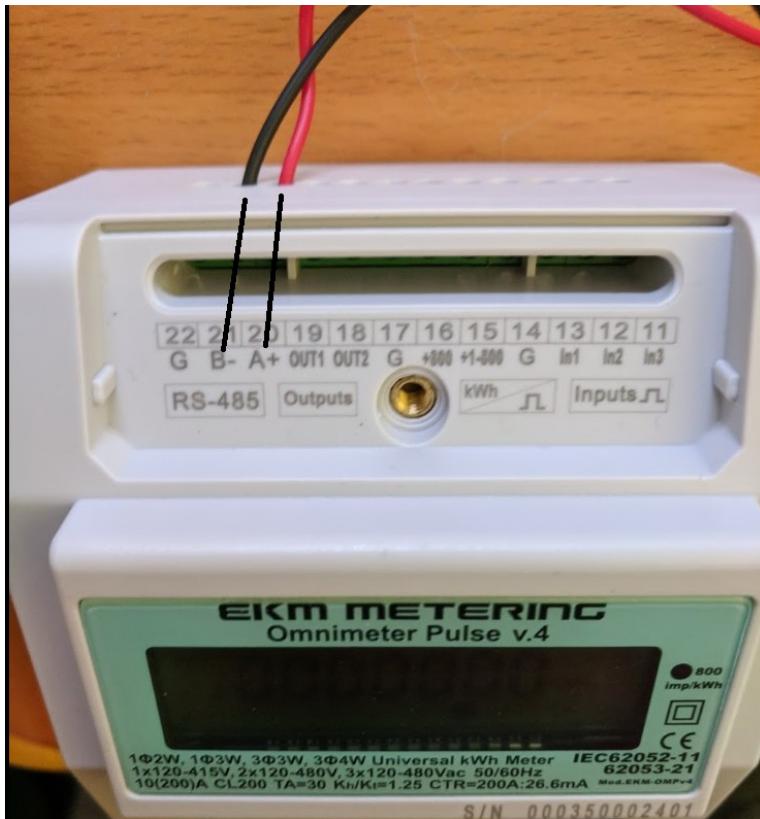

Configuring the FieldServer as a EKM Metering V3 V4 Client

For a detailed discussion on FieldServer configuration, please refer to the FieldServer Configuration Manual. The information that follows describes how to expand upon the factory defaults provided in the configuration files included with the FieldServer (See “.csv” sample files provided with the FS).

This section documents and describes the parameters necessary for configuring the FieldServer to communicate with an EKM Metering V3 V4 system.

The configuration file tells the FieldServer about its interfaces, and the routing of data required. In order to enable the FieldServer for EKM Metering V3 V4 monitoring, the driver independent FieldServer buffers need to be declared in the “Data Arrays” section, the destination device addresses need to be declared in the “Client Side Nodes” section, and the data required from the servers needs to be mapped in the “Client Side Map Descriptors” section. Details on how to do this can be found below.

Note that in the tables, * indicates an optional parameter, with the bold legal value being the default.

1.2 Data Arrays

Section Title		
Data_Arrays		
Column Title	Function	Legal Values
Data_Array_Name	Provide name for Data Array	Up to 15 alphanumeric characters
Data_Array_Format	Provide data format. Each Data Array can only take on one format.	Recommended: Bit, UInt16, Also Supported: Float, UInt32, SInt16, Packed_Bit, Byte, Packed_Byte, Swapped_Byte
Data_Array_Length	Number of Data Objects. Must be larger than the data storage area required by the Map Descriptors for the data being placed in this array.	1-10,000

1.2.5 Data Arrays - Example

```
// Data Arrays
Data_Arrays
Data_Array_Name,           Data_Format,          Data_Array_Length,
EKM-Stats,                 UNT16,                200
000000028801,             FLOAT,               200
```

1.3 Client Side Connections

Create one connection for each EKM Metering V3 V4 serial port. Each connection can only be used to connect to a single EKM Metering V3 V4 interface/port.

Section Title		
Connections		
Column Title	Function	Legal Values
Port	Specify which port the device is connected to the FieldServer	P1-P8
Protocol	Specify protocol used	EKM
Baud*	Specify baud rate	Driver Supports : 110; 300; 600; 1200; 2400; 4800; 9600 ; 19200; 28800; 38400; 57600 Baud EKM Default = 9600
Data_Bits *	Specify parity	Driver Supports : 7,8 EKM Default = 7
Stop_Bits*	Specify data bits	Driver Supports : 1,2 EKM Default = 1
Parity *	Specify stop bits	Driver Supports : Odd, Even, None EKM Default = Even

1.3.1 Client Side Connection Descriptions - Example

```
//      Client Side Connections

Connections

Port,          Baud      Parity,      Data_Bits,  Stop_Bits
R1,           9600      Even,       7,          1,
```

1.4 Client Side Nodes

Create one Node per FACP in the network only.

Section Title		
Nodes		
Column Title	Function	Legal Values
Node_Name	Provide name for node	Up to 12 of the max of 32 alphanumeric characters possible to specify the Node name. NB ! The name must be set to the Meter's 12 character address.
Node_ID	Not used directly by the driver	0-255 Commonly omitted. If you are using Node_Status bits then allocate a Node_ID. Give each meter a unique number.
Protocol	Specify protocol used	EKM

1.4.1 Client Side Nodes - Example

// Client Side Nodes
Nodes
Node_Name, Node_ID, Protocol, Connection
000000028016, 0, EKM, R1

1.5 Client Side Map Descriptors

1.5.1 FieldServer Related Map Descriptor Parameters

Column Title	Function	Legal Values
Map_Descriptor_Name	Name of this Map Descriptor	Up to 32 alphanumeric characters
Data_Array_Name	Name of Data Array where data is to be stored in the FieldServer	One of the Data Array names from “Data Array” section above
Data_Array_Offset	Starting location in Data Array	0 to maximum specified in “Data Array” section above
Function	Function of Client Map Descriptor..	Rdbc,wrbc,wrbx

1.5.2 Driver Related Map Descriptor Parameters


Column Title	Function	Legal Values
Node_Name	Name of Node to fetch data from	One of the node names specified in "Client Node Descriptor" above
Data_Type	This commonly used parameter is not used by this driver.	
Length	<p>Length of Map Descriptor</p> <p>Reserves space in the Data Array.</p>	<p>V3 Read Length=36</p> <p>V4 Read Length = 45</p> <p>V4 ReadB Length = 27</p> <p>6 Month Data Length = 30</p> <p>Set the value to 1 when using services that write to the meters. Explanation is provided in section which describes the services.</p>
Address	The Relay Number	<p>1,2</p> <p>Only required on Map Descriptors which use the service which operates the relays.</p>

1.6 Examples

1.6.1 Map Descriptor Example 1 – Read V.3 Meter

This is the only function available to read energy data from a V3 Meter

```
Map_Descriptors
Map_Descriptor_Name , Data_Array_Name , Data_Array_Offset , Function , Node_Name      , Length , EKM_Function
Read3a           , D3_A_Data        , 0           , Rdbc   , 000000028016 , 36       , v3Read
```

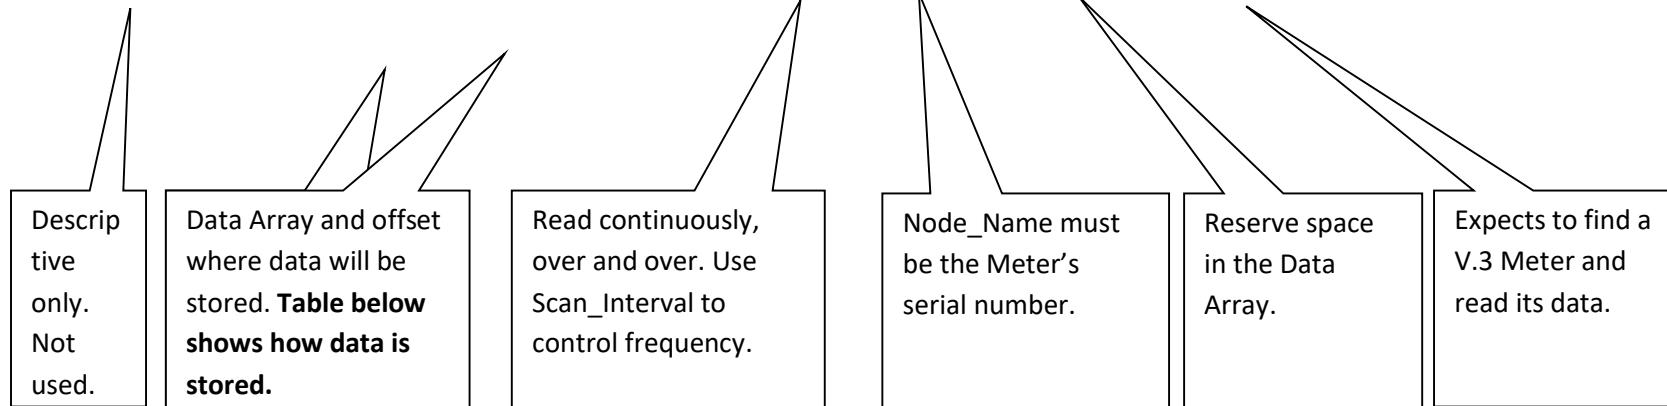

Label	Scaling	Offset
Model	None	0
Firmware	None	1
kWh_Tot	None	3
kWh_Tariff_1	None	4
kWh_Tariff_2	None	5
kWh_Tariff_3	None	6
kWh_Tariff_4	None	7
Rev_kWh_Tot	None	8
Rev_kWh_Tariff_1	None	9
Rev_kWh_Tariff_2	None	10


Rev_kWh_Tariff_3	None	11
Rev_kWh_Tariff_4	None	12
	Divide	
RMS_Volts_Ln_1	By 10	13
	Divide	
RMS_Volts_Ln_2	By 10	14
	Divide	
RMS_Volts_Ln_3	By 10	15
	Divide	
Amps_Ln_1	By 10	16
	Divide	
Amps_Ln_2	By 10	17
	Divide	
Amps_Ln_3	By 10	18
RMS_Watts_Ln_1	None	19
RMS_Watts_Ln_2	None	20
RMS_Watts_Ln_3	None	21
RMS_Watts_Tot	None	22
Power_Factor_Adj_Ln_1	None	23
Power_Factor_Adj_Ln_2	None	24
Power_Factor_Adj_Ln_3	None	25
Max_Demand	None	26
Max_Demand_Period	None	27
CT_Ratio	None	28

Meter_Time	
Year	29
Month	30
Day of Month	31

Day of Week	32
Hour	33
Minute	34
Second	35

1.6.2 Map Descriptor Example 2 – Read V.4

Read the basic data set available from a V.4 Meter.

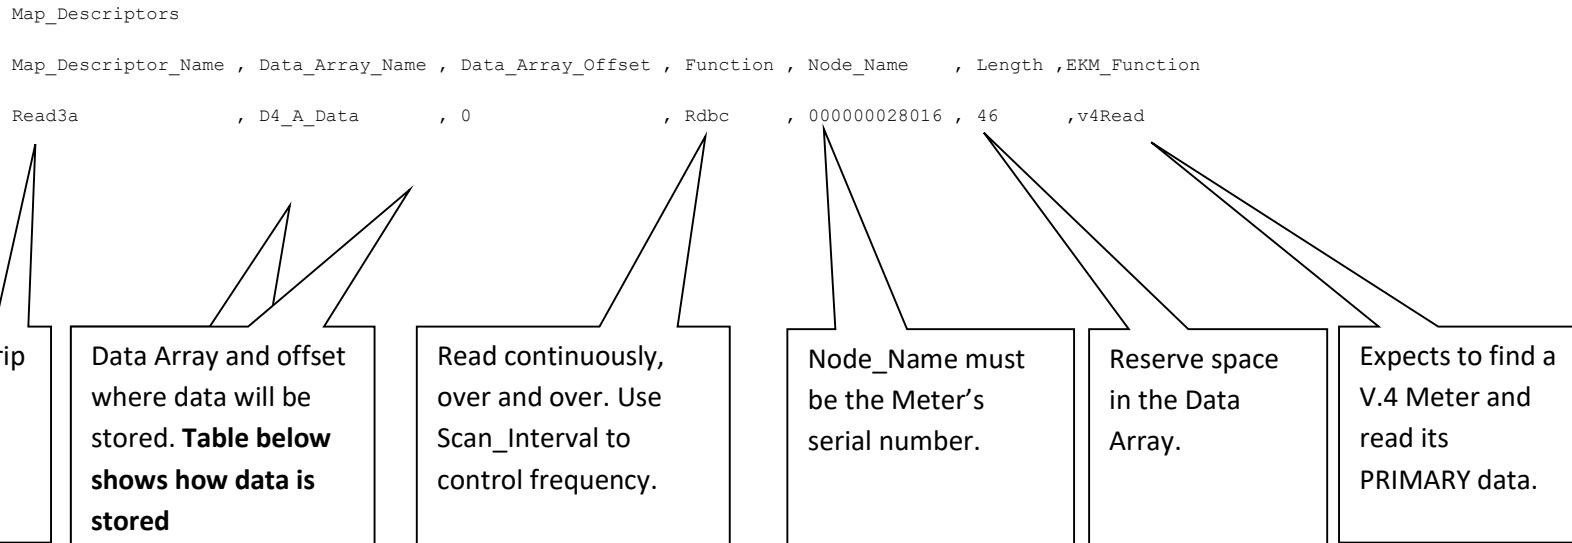


Label	Scale	Offset
Model	None	0
Firmware	None	1
kWh_Tot	kWh_Scale	3
Reactive_Energy_Tot	kWh_Scale	4
Rev_kWh_Tot	kWh_Scale	5
kWh_Ln_1	kWh_Scale	6
kWh_Ln_2	kWh_Scale	7
kWh_Ln_3	kWh_Scale	8
Rev_kWh_Ln_1	kWh_Scale	9

Rev_kWh_Ln_2	kWh_Scale	10
Rev_kWh_Ln_3	kWh_Scale	11
Resettable_kWh_Tot	kWh_Scale	12
Resettable_Rev_kWh_Tot	kWh_Scale	13
RMS_Volts_Ln_1	Divide By 10	14
RMS_Volts_Ln_2	Divide By 10	15
RMS_Volts_Ln_3	Divide By 10	16
Amps_Ln_1	Divide By 10	17
Amps_Ln_2	Divide By 10	18
Amps_Ln_3	Divide By 10	19
RMS_Watts_Ln_1	None	20
RMS_Watts_Ln_2	None	21
RMS_Watts_Ln_3	None	22
RMS_Watts_Tot	None	23
Power_Factor_Ln_1	None	24
Power_Factor_Ln_2	None	25
Power_Factor_Ln_3	None	26
Reactive_Pwr_Ln_1	None	27
Reactive_Pwr_Ln_2	None	28
Reactive_Pwr_Ln_3	None	29
Reactive_Pwr_Tot	None	30
	Divide By	
Line_Freq	100	31
Pulse_Cnt_1	None	32
Pulse_Cnt_2	None	33
Pulse_Cnt_3	None	34
State_Inputs	None	35
State_Watts_Dir	None	36
State_Out	None	37
kWh_Scale	None	38
Meter_Time	None	

Year	None	39
Month	None	40
Day of Month	None	41
Day of Week	None	42
Hour	None	43
Minute	None	44
Second	None	45

1.6.3 Map Descriptor Example 3 – Read V.4 DataB – 2ndary Data Set

Read the secondary data set available from a V.4 Meter.

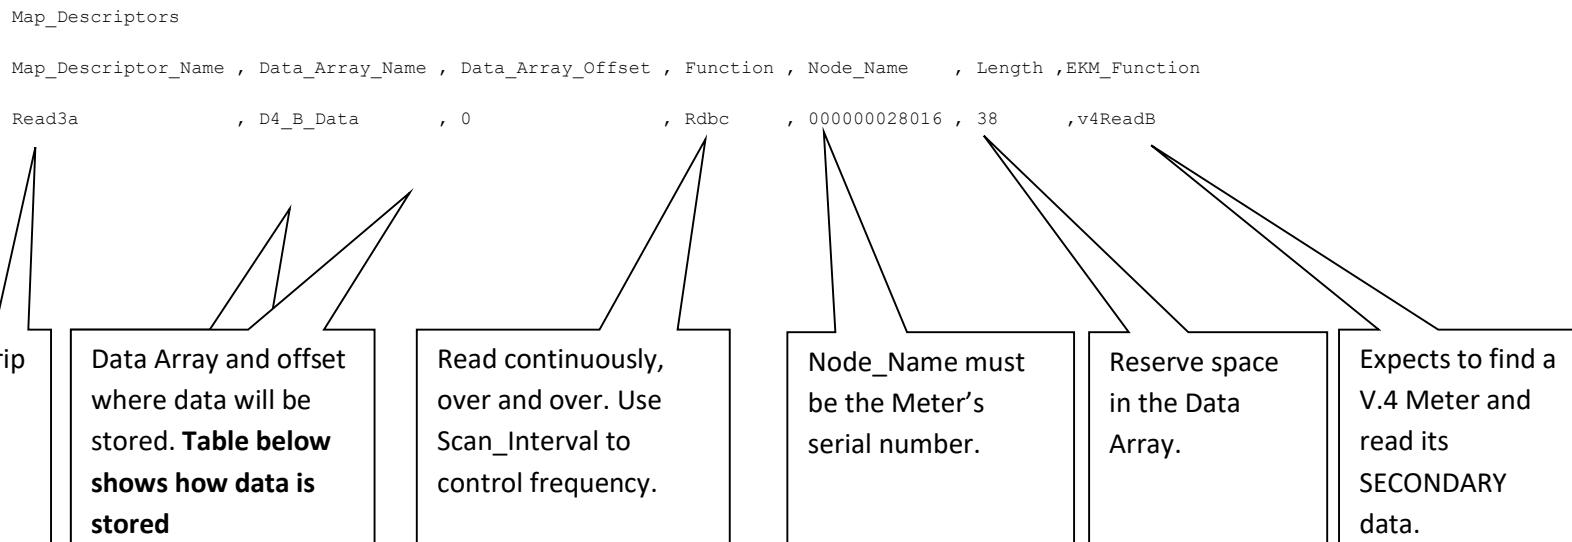

Label	Scale	Offset
Model	None	0
Firmware	None	1
kWh_Tariff_1	kWh_Scale	3
kWh_Tariff_2	kWh_Scale	4
kWh_Tariff_3	kWh_Scale	5
kWh_Tariff_4	kWh_Scale	6
Rev_kWh_Tariff_1	kWh_Scale	7
Rev_kWh_Tariff_2	kWh_Scale	8
Rev_kWh_Tariff_3	kWh_Scale	9
Rev_kWh_Tariff_4	kWh_Scale	10
RMS_Volts_Ln_1	Divide By 10	11

RMS_Volts_Ln_2	Divide By 10	12
RMS_Volts_Ln_3	Divide By 10	13
Amps_Ln_1	Divide By 10	14
Amps_Ln_2	Divide By 10	15
Amps_Ln_3	Divide By 10	16
RMS_Watts_Ln_1	None	17
RMS_Watts_Ln_2	None	18
RMS_Watts_Ln_3	None	19
RMS_Watts_Tot	None	20
Power_Factor_Adj_Ln_1	None	21
Power_Factor_Adj_Ln_2	None	22
Power_Factor_Adj_Ln_3	None	23
RMS_Watts_Max_Demand	Divide By 10	24
Max_Demand_Period	None	25
Pulse_Ratio_1	None	26
Pulse_Ratio_2	None	27
Pulse_Ratio_3	None	28
CT_Ratio	None	29
Pulse_Output_Ratio	None	30
Meter_Time		
Year	None	31
Month	None	32
Day of Month	None	33
Day of Week	None	34
Hour	None	35
Minute	None	36
Second	None	37

1.6.4 Map Descriptor Example 4 – Read V.4 6 Months of Data

Read the secondary data set available from a V.4 Meter.

```
Map_Descriptors
Map_Descriptor_Name , Data_Array_Name , Data_Array_Offset , Function , Node_Name , Length , EKM_Function
Read3a , D4_B_Data , 0 , Rdbc , 000000028016 , 38 , v3v4SixMonthFwd
```

Descriptive only.
Not used.

Data Array and offset where data will be stored. **Table below shows how data is stored**

Read continuously, over and over. Use Scan_Interval to control frequency.

Node_Name must be the Meter's serial number.

Reserve space in the Data Array.

Expects to find a V.4 . Valid Entries are:
v3v4SixMonthFwd
or
v3v4SixMonthREV

Label	Scale	Offset
Month_1_Ttl	kWh_Scale	0
Month_1_Tariff_1	kWh_Scale	1
Month_1_Tariff_2	kWh_Scale	2
Month_1_Tariff_3	kWh_Scale	3
Month_1_Tariff_4	kWh_Scale	4
Month_2_Ttl	kWh_Scale	5
Month_2_Tariff_1	kWh_Scale	6
Month_2_Tariff_2	kWh_Scale	7
Month_2_Tariff_3	kWh_Scale	8
Month_2_Tariff_4	kWh_Scale	9
Month_3_Ttl	kWh_Scale	10


Month_3_Tariff_1	kWh_Scale	11
Month_3_Tariff_2	kWh_Scale	12
Month_3_Tariff_3	kWh_Scale	13
Month_3_Tariff_4	kWh_Scale	14
Month_4_Ttl	kWh_Scale	15
Month_4_Tariff_1	kWh_Scale	16
Month_4_Tariff_2	kWh_Scale	17
Month_4_Tariff_3	kWh_Scale	18
Month_4_Tariff_4	kWh_Scale	19
Month_5_Ttl	kWh_Scale	20
Month_5_Tariff_1	kWh_Scale	21
Month_5_Tariff_2	kWh_Scale	22
Month_5_Tariff_3	kWh_Scale	23
Month_5_Tariff_4	kWh_Scale	24
Month_6_Ttl	kWh_Scale	25
Month_6_Tariff_1	kWh_Scale	26
Month_6_Tariff_2	kWh_Scale	27
Month_6_Tariff_3	kWh_Scale	28
Month_6_Tariff_4	kWh_Scale	29

1.6.5 Map Descriptor Example 5 – Control V.4 Relays

Turn Relay 1 or 2 On/Off and optionally set the duration. The Address param tells the driver which relay you want to act on. Two data items are sent with the message. At offset=0 set the required state (zero or 1). At offset=1 set the duration in seconds. Zero means latch. Max seconds are 9999. The wrbx (write on update) action is triggered when the data in offset zero is updated. The wrbx action is not triggered when you set the value at offset=1 – the reason is that the Map Descriptor length is set to 1. For these tasks to execute to completion, the meter must have a password of '00000000'. If the meter password is different then the password must be setup in the configuration file. (See Appendix).

Map_Descriptors

```
Map_Descriptor_Name , Address ,Data_Array_Name , Data_Array_Offset , Function , Node_Name      , Length ,EKM_Function
Control Relay 1      , 1        ,D4_RELAY1           , 0          , wrbx      , 000000028016 , 1      , v4SetRelay
Control Relay 2      , 2        ,D4_RELAY2           , 0          , wrbx      , 000000028016 , 1      , v4SetRelay
```

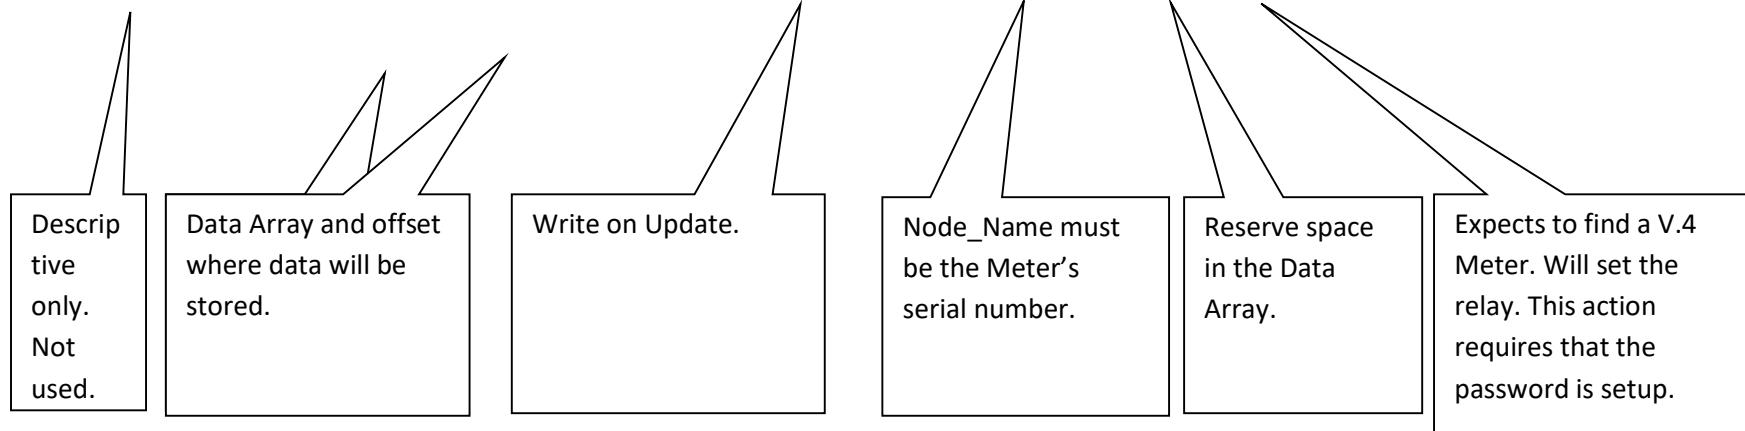


1.6.6 Map Descriptor Example 6 – Set CT Ratio

This task extracts the new CT ratio from offset=0 of the data array and sends it to the Meter. Works with V3 or V4 Meters. The meter must have a password of '00000000'. If the meter password is different then the password must be setup in the configuration file. (See Appendix).

Map_Descriptors

Map_Descriptor_Name , Data_Array_Name , Data_Array_Offset , Function , Node_Name , Length , EKM_Function

Set CT Ratio , DA_CT_Ratio , 0 , wrbx , 000000028016 , 1 , v3v4SetCTratio

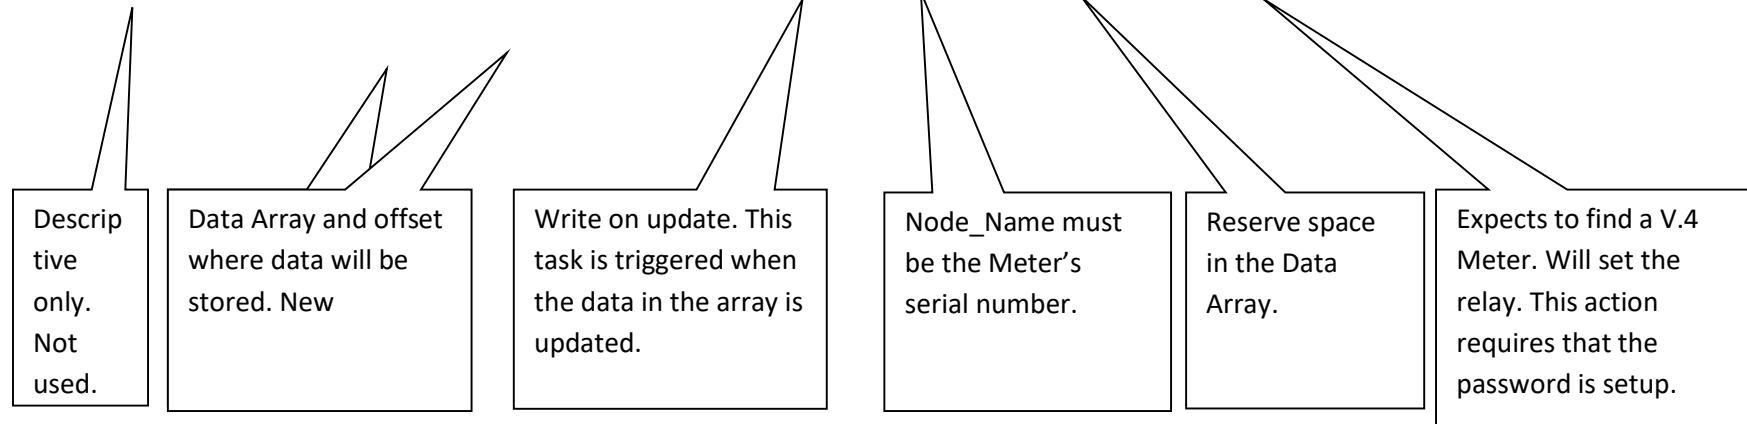


1.6.7 Map Descriptor Example 7 – Reset

Trigger this action by updating the value in the Data Array offset=0. The value is not sent to the Meter but is only used as a trigger. Works with V4 Meters. The meter must have a password of '00000000'. If the meter password is different then the password must be setup in the configuration file. (See Appendix).

Map_Descriptors


Map_Descriptor_Name ,Data_Array_Name , Data_Array_Offset , Function , Node_Name , Length ,EKM_Function

Set CT Ratio ,DA_RESET , 0 , wrbx , 000000028016 , 1 , v4Reset

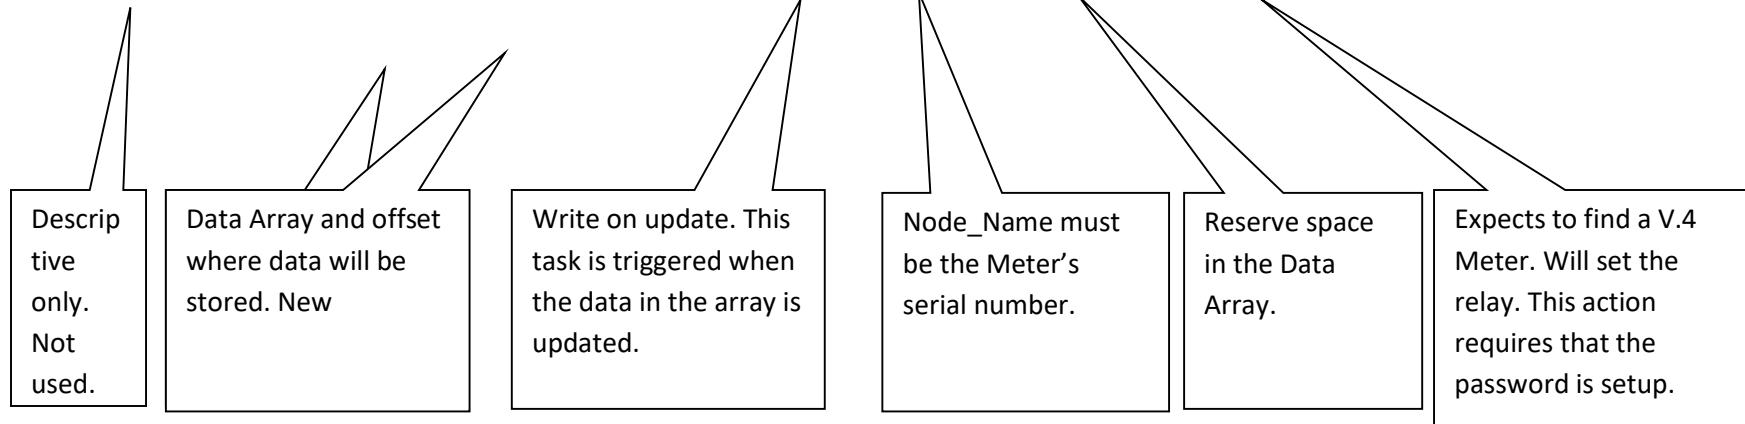

1.6.8 Map Descriptor Example 8 – Set Time

Trigger this action by updating the value in the Data Array offset=0. The value is not sent to the Meter but is only used as a trigger. When triggered, the driver extracts values from the Data array to send to the Meter to set the time. Preload offsets 1..7 then set the trigger.

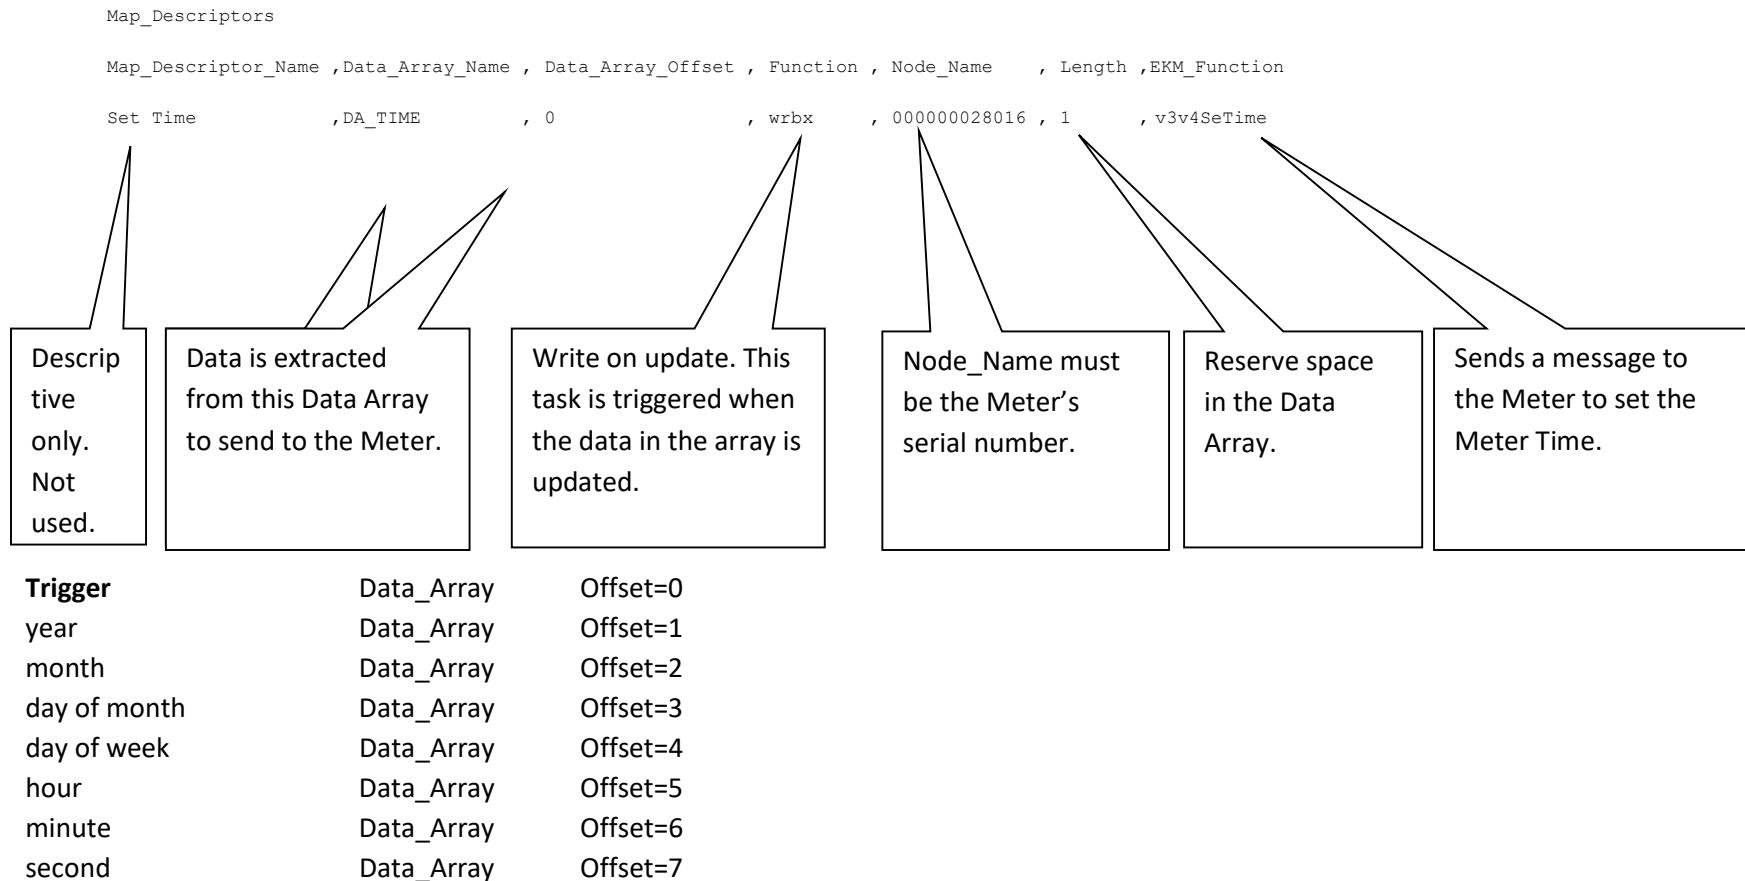

Configuring the FieldServer as a EKM Metering V3 V4 Server

This driver cannot be used to emulate an EKM Meter. If you want to use another energy meter and you want it to appear like an EKM meter then you would need this emulation. Ask our sales department if you need this functionality.

Appendices

1.7 Notes on Operation of the Driver

In the configuration of a gateway, normally a single map descriptor represents a single task - for example read some data and store the data extracted from the response in the Data Array associated with the Map Descriptor.

This driver operates slightly differently. For example to read the 6 Month Data, one has to perform a Read of Data Set A prior. When one wants to send a command like the time or a reset, then the driver actually has to execute 3 tasks – Read Data Set A, Send the password and then finally send the command.

A consequence of this is that the Data SetA is read more often than necessary and in some cases its payload is discarded because the Data Array associated with the Map Descriptor is not intended for storing the Data Set A data.

Each time a response from the Meter contains data, the Data Array named with the Meter Number will also be updated. This data array will always have the most complete and up to date information. Read the section on Additional Data Storage method.

1.8 Additional Storage Method

If you create a Data Array whose name is identical to the Node_Name (The Meter Serial number) then when a read task is executed, besides storing the data in the Map Descriptor's Data array, the driver will additionally store data in the array named after the Meter.

Eg.

Data_Arrays

Data_Array_Name	,	Data_Format	,	Data_Array_Length
000350002401	,	FLOAT	,	200
000000028016	,	FLOAT	,	200

<u>ReadV4</u>		<u>Offset</u>	<u>ReadV4DataB</u>		<u>Offset</u>
Model	None	0	Model	None	50
Firmware	None	1	Firmware	None	51
Not used	None	2	Not used		52
kWh_Tot	kWh_Scale	3	kWh_Tariff_1	kWh_Scale	53
Reactive_Energy_Tot	kWh_Scale	4	kWh_Tariff_2	kWh_Scale	54
Rev_kWh_Tot	kWh_Scale	5	kWh_Tariff_3	kWh_Scale	55
kWh_Ln_1	kWh_Scale	6	kWh_Tariff_4	kWh_Scale	56
kWh_Ln_2	kWh_Scale	7	Rev_kWh_Tariff_1	kWh_Scale	57
kWh_Ln_3	kWh_Scale	8	Rev_kWh_Tariff_2	kWh_Scale	58
Rev_kWh_Ln_1	kWh_Scale	9	Rev_kWh_Tariff_3	kWh_Scale	59
Rev_kWh_Ln_2	kWh_Scale	10	Rev_kWh_Tariff_4	kWh_Scale	60
			Divide By		
Rev_kWh_Ln_3	4Con	11	RMS_Volts_Ln_1	10	61
			Divide By		
Resettable_kWh_Tot	kWh_Scale	12	RMS_Volts_Ln_2	10	62
			Divide By		
Resettable_Rev_kWh_Tot	kWh_Scale	13	RMS_Volts_Ln_3	10	63
	Divide By		Divide By		
RMS_Volts_Ln_1	10	14	Amps_Ln_1	10	64
	Divide By		Divide By		
RMS_Volts_Ln_2	10	15	Amps_Ln_2	10	65
	Divide By		Divide By		
RMS_Volts_Ln_3	10	16	Amps_Ln_3	10	66
	Divide By				
Amps_Ln_1	10	17	RMS_Watts_Ln_1	None	67
	Divide By				
Amps_Ln_2	10	18	RMS_Watts_Ln_2	None	68
	Divide By				
Amps_Ln_3	10	19	RMS_Watts_Ln_3	None	69
RMS_Watts_Ln_1	None	20	RMS_Watts_Tot	None	70
RMS_Watts_Ln_2	None	21	Power_Factor_Adj_Ln_1	None	71
RMS_Watts_Ln_3	None	22	Power_Factor_Adj_Ln_2	None	72
RMS_Watts_Tot	None	23	Power_Factor_Adj_Ln_3	None	73
			Divide By		
Power_Factor_Ln_1	None	24	RMS_Watts_Max_Demand	10	74
Power_Factor_Ln_2	None	25	Max_Demand_Period	None	75
Power_Factor_Ln_3	None	26	Pulse_Ratio_1	None	76
Reactive_Pwr_Ln_1	None	27	Pulse_Ratio_2	None	77
Reactive_Pwr_Ln_2	None	28	Pulse_Ratio_3	None	78

Reactive_Pwr_Ln_3	None	29	CT_Ratio	None	79
Reactive_Pwr_Tot	None	30	Pulse_Output_Ratio	None	80
	Divide By				
Line_Freq	100	31	Year	None	81
Pulse_Cnt_1	None	32	Month	None	82
Pulse_Cnt_2	None	33	Day of Month	None	83
Pulse_Cnt_3	None	34	Day of Week	None	84
State_Inputs	None	35	Hour	None	85
State_Watts_Dir	None	36	Minute	None	86
State_Out	None	37	Second	None	87
kWh_Scale	None	38			
Year	None	39			
Month	None	40			
Day of Month	None	41			
Day of Week	None	42			
Hour	None	43			
Minute	None	44			
Second	None	45			

<u>ReadV4SixMonthsFwd</u>		Offset	<u>ReadV4SixMonthsRev</u>		Offset
Month_1_Ttl	kWh_Scale	90	Month_1_Ttl	kWh_Scale	130
Month_1_Tariff_1	kWh_Scale	91	Month_1_Tariff_1	kWh_Scale	131
Month_1_Tariff_2	kWh_Scale	92	Month_1_Tariff_2	kWh_Scale	132
Month_1_Tariff_3	kWh_Scale	93	Month_1_Tariff_3	kWh_Scale	133
Month_1_Tariff_4	kWh_Scale	94	Month_1_Tariff_4	kWh_Scale	134
Month_2_Ttl	kWh_Scale	95	Month_2_Ttl	kWh_Scale	135
Month_2_Tariff_1	kWh_Scale	96	Month_2_Tariff_1	kWh_Scale	136
Month_2_Tariff_2	kWh_Scale	97	Month_2_Tariff_2	kWh_Scale	137
Month_2_Tariff_3	kWh_Scale	98	Month_2_Tariff_3	kWh_Scale	138
Month_2_Tariff_4	kWh_Scale	99	Month_2_Tariff_4	kWh_Scale	139
Month_3_Ttl	kWh_Scale	100	Month_3_Ttl	kWh_Scale	140
Month_3_Tariff_1	kWh_Scale	101	Month_3_Tariff_1	kWh_Scale	141
Month_3_Tariff_2	kWh_Scale	102	Month_3_Tariff_2	kWh_Scale	142
Month_3_Tariff_3	kWh_Scale	103	Month_3_Tariff_3	kWh_Scale	143
Month_3_Tariff_4	kWh_Scale	104	Month_3_Tariff_4	kWh_Scale	144
Month_4_Ttl	kWh_Scale	105	Month_4_Ttl	kWh_Scale	145
Month_4_Tariff_1	kWh_Scale	106	Month_4_Tariff_1	kWh_Scale	146
Month_4_Tariff_2	kWh_Scale	107	Month_4_Tariff_2	kWh_Scale	147
Month_4_Tariff_3	kWh_Scale	108	Month_4_Tariff_3	kWh_Scale	148
Month_4_Tariff_4	kWh_Scale	109	Month_4_Tariff_4	kWh_Scale	149
Month_5_Ttl	kWh_Scale	110	Month_5_Ttl	kWh_Scale	150
Month_5_Tariff_1	kWh_Scale	111	Month_5_Tariff_1	kWh_Scale	151

Month_5_Tariff_2	kWh_Scale	112	Month_5_Tariff_2	kWh_Scale	152
Month_5_Tariff_3	kWh_Scale	113	Month_5_Tariff_3	kWh_Scale	153
Month_5_Tariff_4	kWh_Scale	114	Month_5_Tariff_4	kWh_Scale	154
Month_6_Ttl	kWh_Scale	115	Month_6_Ttl	kWh_Scale	155
Month_6_Tariff_1	kWh_Scale	116	Month_6_Tariff_1	kWh_Scale	156
Month_6_Tariff_2	kWh_Scale	117	Month_6_Tariff_2	kWh_Scale	157
Month_6_Tariff_3	kWh_Scale	118	Month_6_Tariff_3	kWh_Scale	158
Month_6_Tariff_4	kWh_Scale	119	Month_6_Tariff_4	kWh_Scale	159

1.9 Supported Communications functions

Always check the Data Sheet for an accurate and up to date list.

Protocol Service	Supported
V3 Read Meter Data/Connect	Yes
V4 Read Meter Data A/Connect	Yes
V4 Read Meter Data B	Yes
V4 Set Relay	Yes
V4 Set Pulse Input Ratio	No. See Note 1
V4 Set Pulse Output Ratio	No. See Note 1
V4 Reset Resettable kWh Reverse	Yes
V4 Auto Reset Max Demand	No. See Note 1
V4 Set LCD	No.
v3/v4 Send Password	Yes
v3/v4 Change Password	No. See Note 1
v3/v4 Set Max Demand Period	No. See Note 1
v3/v4 Set Max Demand Reset Value	No. See Note 1
v3/v4 Set Time	Yes
v3/v4 Set CT Ratio	Yes
v3/v4 Set Schedule Tariffs	No. See Note 1
v3/v4 Read Schedule Tariffs	No. See Note 1
v3/v4 Set Seasons	No. See Note 1
v3/v4 Set Holidays	No. See Note 1

v3/v4 Read Holiday Dates	No. See Note 1
v3/v4 Set Schedule for Weekend and Holiday	No. See Note 1
v3/v4 Read 6 Months	Yes

Note 1 : These are configuration services. The data does not change during normal operation once installation and setup has been completed	If you require these services for a project please contact our sales department to get special firmware.

1.10 Password Protected Meters

Support for max 6 digit password. Use the 'Route' parameter on the node as illustrated in the example below. If not specified as password of zero's is assumed.

Nodes

Node_Name , Node_ID , Protocol , Port ,Route

000350002401 , 1 , EKM , R1 ,1.2.3.4.5.6

1.11 Revision History

Date	Resp	Format	Driver Ver.	Doc. Rev.	Comment
2019Jan21	PMC		1.0	1.0	Created