

CHAPTER 12 Operation (Level 4 password - System Administrator)

Upon entry of a valid Level 4 password in the password screen, pressing F2 will allow access to edit password.

EDIT PASSWORD (A2)

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	E	D	I	T		P	A	S	S	W	O	R	D	S						
B	L	:	X		#	X	X	Y	Y	Y	Y	Y		Z	Z	Z	Z	Z	Z	
C	S	Y	S	A	D	M		X	X	X	X	X								
D																				

F1	DECR. FIELD @ CURSOR	F4	INCR. FIELD @ CURSOR
F2		F5	
F3		F6	
ESC	RETURN TO PASSWORD (A)	ENT	ACCEPT PASSWORD
←	MOVE CURSOR LEFT	→	MOVE CURSOR RIGHT
#'s	PASSWORD ENTRY	HLP	

The controller is shipped with a factory default Level 4 password of 10000. It is recommended to change this password to prevent others from these higher level accesses.

- B3 = PASSWORD LEVEL (2 OR 3)
- B9-13 = A FIVE DIGIT PASSWORD
- B16-17 = PASSWORD NUMBER (01-16), 16 DIFFERENT PASSSSWORDS AVAILABLE FOR LEVEL 2 AND 3
- B15-20 = A SIX POSITION ALPHANUMERIC DESCRIBING PASSWORD
- C8-12 = A FIVE DIGIT NUMBER FOR PASSWORD LEVEL 4 SYSTEM ADMINISTRATOR

ERASE HISTORY (H6)

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	E	R	A	S	E		H	I	S	T	O	R	Y	?	?	?				
B	P	R	E	S	S		F	2		T	O		C	O	N	F	I	R	M	
C	P	R	E	S	S		F	3		T	O		U	N	E	R	A	S	E	
D	P	R	E	S	S		E	S	C		T	O		C	A	N	C	E	L	

F1	RETURN TO HISTORY (H)	F4	RETURN TO HISTORY (H)
F2	ERASE HISTORY	F5	RETURN TO HISTORY (H)
F3	RETURN TO HISTORY (H)	F6	RETURN TO HISTORY (H)
ESC	RETURN TO HISTORY (H)	ENT	RETURN TO HISTORY (H)
←	RETURN TO HISTORY (H)	→	RETURN TO HISTORY (H)
#'s	RETURN TO HISTORY (H)	HLP	HELP (HL - H6)

MESSAGE TEST (P55551)

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	Z	O	N	E	-	S	T	A	T	E	:	X	X	X	-	Z	Z	Z	Z	
B	T	E	S	T		I	N	T	E	R	V	A	L	:	Y	Y	Y	S		
C	N	U	M	B	E	R		O	F		T	E	S	T	S	:	X	X	X	
D	P	R	E	S	S		E	N	T	E	R		T	O		S	T	A	R	T

F1	DECR. FIELD @ CURSOR	F4	INCR. FIELD @ CURSOR
F2	PAUSE TEST	F5	PAUSE TEST
F3	PAUSE TEST	F6	PAUSE TEST
ESC	DIAG 4 (P5555)	ENT	START TEST
←	MOVE CURSOR LEFT	→	MOVE CURSOR RIGHT
#'s	DATA ENTRY	HLP	HELP (HL - P55551)

Tests zone message to R2M and SOM modules.

- A13-15 = ZONE NUMBER OF BROADCAST MESSAGE
- A17-20 = STATE TO BROADCAST
- B16-18 = NUMBER OF SECONDS FOR BROADCAST

This page is intentionally left blank