

A Sierra Monitor Company

ENOTE 0098

LonWorks - Deleting Key Files

Rev 2

TABLE OF CONTENTS

1	Intro	oduction	. 2
2	Dele	eting lonvars.cfg and fserver.xif	. 2
2	1	Instructions	.2



INTRODUCTION

1

This is an Enote describing how to delete the LonWorks Bindings and external interface files, in order to regenerate these files.

2 DELETING LONVARS.CFG AND FSERVER.XIF

2.1 Instructions

- Open a command prompt to the following folder: C:\FieldServer Technologies\FieldServer Utilities\Bin
- Type the following: ruinet -i<ip address> -zlonvars.cfg
 - 1. replace <ip address> with the IP address of the FieldServer
 - 2. For example: ruinet -i192.168.2.100 -zlonvars.cfg
- Type the following: ruinet -i<ip address> -zfserver.xif
- Then restart the FieldServer with the command: ruinet -i<ip address> -b

