



FieldServer Driver - Serial FS-8700-26 Notifier 200/300/400

Driver Code: NOTA
Version: 1.00

Devices Supported: Notifier AFP200, AFP300 and AFP400 Fire Alarm Panels
Interface: RS-232 utilizing Notifier Fire Alarm Panel Connector adapter
Baud: 2400
Parity: Even (AFP200); None (AFP300/AFP400)
Data Bits: 7 (AFP200); 8 (AFP300/AFP400)
Handshaking: None

Device Types Supported

Detectors

- Alarms
- Troubles
- Pre-Alarms
- Not Installed

Modules

- Alarms
- Troubles
- Pre-Alarms
- Not Installed

Zones

- Only if the default "Zone xx" Labeling (where xx is the zone number) is used. If custom zone descriptions are used, they will not be reported to the driver.

System Alarm

Module Type Codes Supported

- | | | | | |
|----------------|----------------|----------------|----------------|------------------|
| - Monitor | - Supervisory | - Man-Release | - Trouble Mon | - Man Rel. Delay |
| - Pull Station | - Tamper | - Silence | - Security | - Second Shot |
| - Smoke Detect | - Hazard Alert | - System Reset | - Tele Page | - Sprinkler Sys |
| - Blank | - Fire Control | - Evacuate | - Allcall Page | - Comb. Monitor |
| - Waterflow | - Abort Switch | - PAS Inhibit | | |

Note that status on control devices is not supported. As zones can be reported, this should not be a problem.