



DK-RC-ENO-1i

DK-RC-ENO-1iC

EnOcean Interface for DAIKIN Air Conditioners
Compatible with SKY and VRV lines

User's Manual

r1 eng
Issue Date: 02/2012

© Intesis Software S.L. All Rights Reserved.

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used only in accordance with the terms of those agreements. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or any means electronic or mechanical, including photocopying and recording for any purpose other than the purchaser's personal use without the written permission of Intesis Software S.L.

Intesis Software S.L.
Milà I Fontanals, 1 bis, 1º
08700 Igualada
Spain

TRADEMARKS

All trademarks and tradenames used in this document are acknowledged to be the copyright of their respective holders

Interface for integration of Daikin air conditioners into EnOcean systems.

2 models are available for this interface, with the following **Order Codes**:

DK-RC-ENO-1i

EnOcean communication frequency: 868 MHz

DK-RC-ENO-1iC

EnOcean communication frequency: 315 MHz

INDEX

1.	Presentation	6
1.1	Typical Application.....	7
2.	Quick setup	8
3.	Connection and placement.....	9
3.1	Connection to AC unit	9
3.2	Connection of binary inputs	10
3.3	Placement	11
3.3.1	Screening zones.....	11
3.3.2	Penetration Angle.....	12
3.3.3	Distance between receiver and sources of interference	12
3.3.4	Use of repeaters	12
3.4	Power up.....	13
4.	Manual configuration	14
4.1	Configuration.....	14
4.2	Normal mode.....	15
4.2.1	Monitor mode	15
4.2.2	Teach-in	16
4.3	Learning mode.....	17
4.3.1	Learning sensors.....	18
4.3.2	Learning gateways	18
4.4	Erasing mode.....	19
4.4.1	Deleting one by one	19
4.4.2	Deleting all the devices linked to one profile	19
4.4.3	Return to factory settings.....	20
4.5	Remote management disablement.....	20
5.	Remote configuration.....	21
5.1	Reception profiles.....	21
5.2	Transmission profiles	21
5.3	Configuration.....	22
5.3.1	Machine operation	23
5.3.2	Window operation	23
5.3.3	Keycard operation	23
5.3.4	Occupancy operation	24
5.3.5	Input operation.....	24
5.3.6	Radio operation.....	25
5.4	Default values.....	25
6.	Special Behaviours	26
6.1	Window contact	26
6.2	External temperature sensors. Virtual temperature.....	26
6.3	Key card	27
6.4	Occupancy sensors.....	27
6.5	MultiTeach-in procedure	28
6.6	Binary inputs	28
6.7	Setpoint.....	28
6.8	Master of mode.....	29
7.	Status monitoring.....	30
7.1	L2 (yellow): AC monitoring.....	30
7.2	L1 (green): EnOcean monitoring	30
7.3	L3 (green): Tx data activity LED.....	30
8.	How to?	31
8.1	Check if my AC unit can be controlled with the IntesisBox®	31
8.2	Disable AC remote controller	31
8.3	Link sensors to the IntesisBox®	31


8.4	Control & monitor the IntesisBox® from an EnOcean gateway	31
8.5	Control & monitor the IntesisBox® from a software application.....	32
8.6	Configure parameters	32
8.7	Check if the devices have been correctly learnt	32
8.8	Protect the IntesisBox® from undesired remote access.....	32
8.9	Improve radio coverage of IntesisBox®	32
9.	Technical data and dimensions.....	33
10.	Dimensions.....	34
11.	AC Unit Types compatibility	34
12.	AC profile data (Generic HVAC interface)	35
12.1	EEP: 07-20-10	35
12.2	EEP: 07-20-11	38
12.3	EEP: 07-10-03	40
13.	Error Codes	41
14.	EnOcean Interoperability	44
15.	Regulations and standards.....	46

1. Presentation



IntesisBox® DK-RC-ENO-1i and IntesisBox® DK-RC-ENO-1iC devices allow a complete and natural integration of Daikin air conditioners with EnOcean control systems both in their 868 MHz (DK-RC-ENO-1i) and 315 MHz (DK-RC-ENO-1iC) versions.

Compatible with SKY and VRV lines (check section 11).

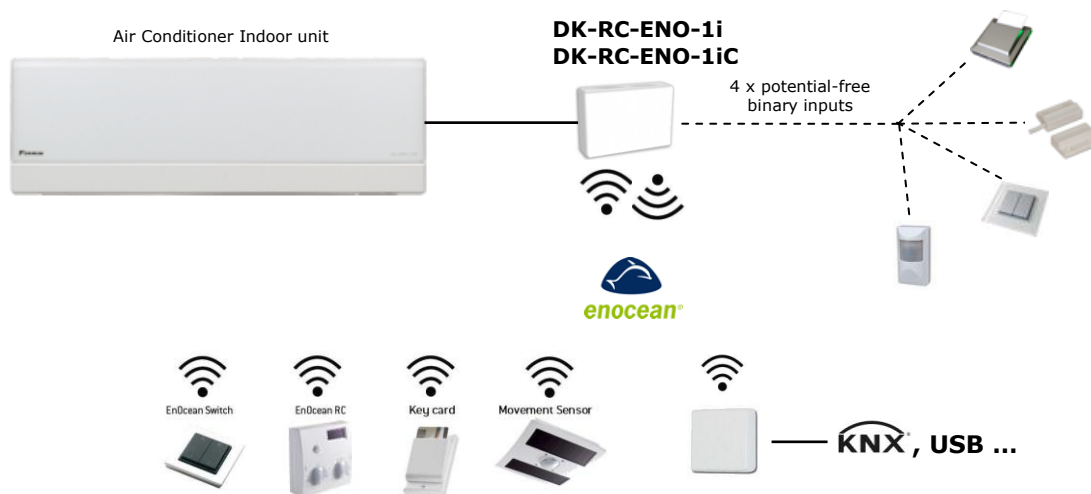

IntesisBox® DK-RC-ENO-1i / 1iC (IntesisBox® from now on) allows monitoring and control, fully bi-directionally, all the functioning parameters of Daikin air conditioners from EnOcean installations.

- Small dimensions.
- Quick installation and possibility of hidden installation.
- External power not required.
- Direct connection to the AC indoor unit (split unit).
- Fully EnOcean interoperable. Control and monitoring, from sensors or gateways, of the internal variables of the indoor unit and error codes and indication.
- Use the air conditioner ambient temperature or the one measured by an EnOcean temperature sensor or Thermostat.
- AC unit can be controlled simultaneously by the remote control of the AC unit and by EnOcean devices.
- Advanced control functions: use it as a room controller.
- 4 binary inputs. They work as standard EnOcean binary inputs as well as being used to control the AC directly.

1.1 Typical Application

In Figure 1.1 it is shown a typical application of IntesisBox® in a hotel room. The different devices that control the AC unit, like switches, key cards, window contacts, are connected to it through the IntesisBox®.



Figure 1.1 Typical application of IntesisBox® in a hotel

Typical transmitting EnOcean devices:

- Thermostat
- Switches
- Key card
- Window contact
- Occupancy sensor
- ...

Typical receiving EnOcean devices:

- Actuators
- Gateway
- ...

2. Quick setup

1. Connect the IntesisBox® to the Air conditioner (section 3)
2. Wait for the initialization process to be finished (section 3.4)
3. Configure the IntesisBox®:
 - a. Manually (section 4.1)
 - b. Remotely using the Intesis Configuration Software (section 5.3)
4. Learn the EnOcean sensors/gateways that will control the IntesisBox®:
 - a. Manually (section 4.3)
 - b. Remotely using the Intesis Configuration Software (section 5.1)
5. Teach the signals of the IntesisBox® that will be sent to other EnOcean actuators/gateways:
 - a. Manually (section 4.2.2)
 - b. Remotely using the Intesis Configuration Software (section 5.3)
6. (Optional) Protect the IntesisBox® from an undesired remote access (section 8.8)
7. The device is ready to be used

3. Connection and placement

3.1 Connection to AC unit

The IntesisBox® connects directly to the DAIKIN two wire P1/P2 bus. Depending on which controllers are available the recommended connection methods are the following (details in Figure 3.1):

- **Wired remote control available.** Connect the interface as Slave in parallel with the wired remote controllers (Wall controller acts as master).
- **Infrared remote control available.** Connect the interface as Master in parallel with the infrared remote controller (Infrared receiver) as Slave.
- **No remote control available** Connect the interface directly to the P1/P2 bus of the indoor unit as Master when there is no DAIKIN remote controller.

Disconnect mains power from the AC unit and use a 2 wire cable with a diameter of 0.75mm^2 to 1.25mm^2 for the connection of the IntesisBox®, DAIKIN's remote controller and its corresponding indoor unit. Screw the suitably peeled cable ends in the corresponding P1/P2 terminals of each device, as summarized in Figure 3.1.

Maximum P1/P2 bus length is 500 meters, cable has no polarity.

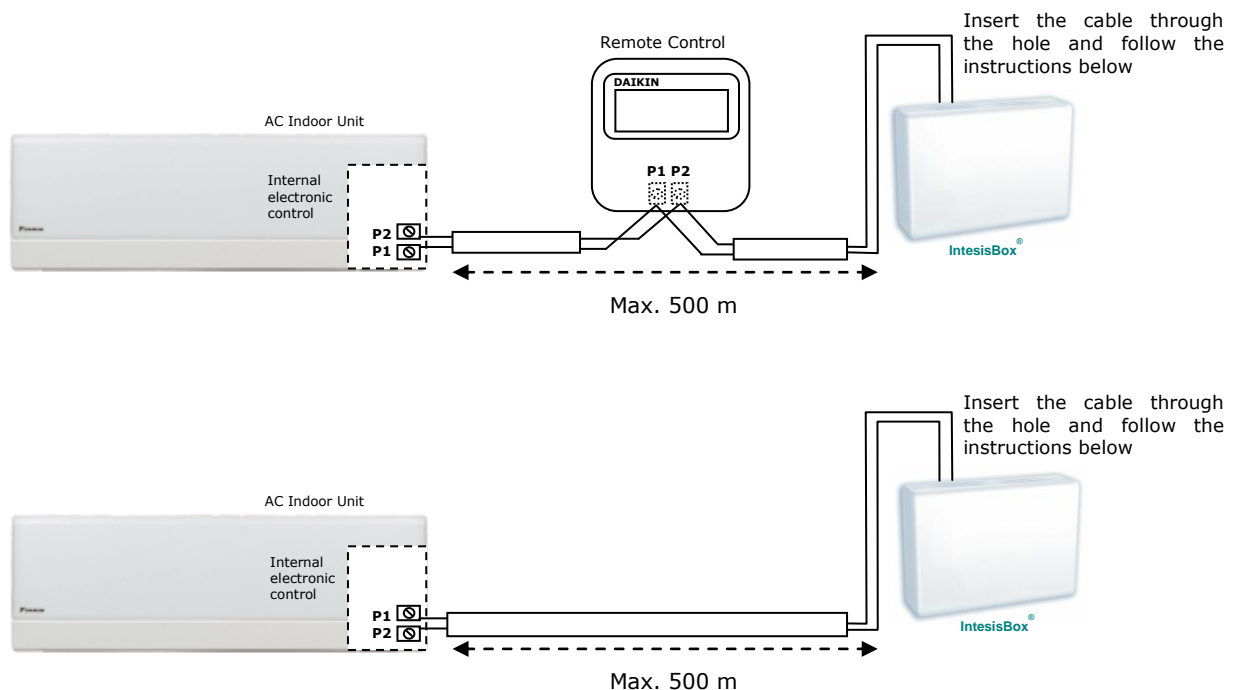


Figure 3.1 IntesisBox® connection diagram

To connect the IntesisBox® to the AC, use the lid hole above the connector K1 as indicated in Figure 3.2:

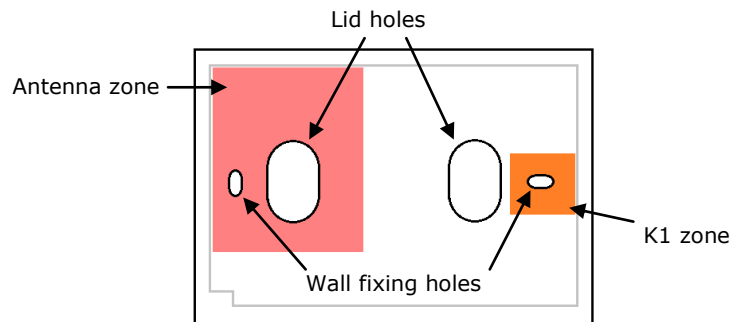


Figure 3.2 Connection scheme

Important: The cable should not be placed on top of the antenna zone (is marked in Figure 3.2) as the performance of the device might be affected. The antenna zone changes depending on the position of the antenna cable (see section 8.9).

3.2 Connection of binary inputs

Follow the scheme below in order to connect the binary inputs of the K2 connector (check Figure 4.1).

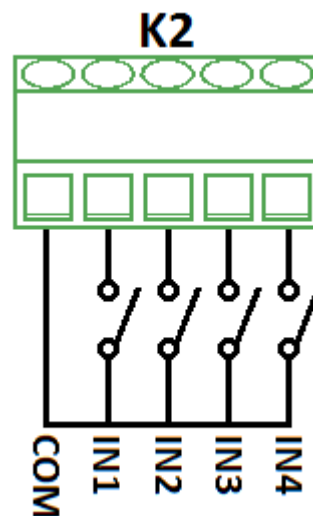


Figure 3.3 Connection of binary inputs

3.3 Placement

The IntesisBox® interface antenna has a better sensibility when the device is placed vertically, and therefore this is the preferred position when placed (antenna zone should be located in the bottom side, floor side, once the device is fixed to the wall).

The coverage distance (see Table 3.1) of the signal emitted by the IntesisBox®, or by any other EnOcean device, is determined by the room geometry and where they are placed. As an example, long narrow corridors with wide walls are an adverse situation. People or other obstacles can reduce the coverage distance too. Therefore, is advised to always think in the worst possible scenario to decide the placement of the device to ensure a good stability in the radio system.

Coverage distance	Conditions
< 30 m	Under ideal conditions: broad room, no obstacles, good antenna design and good antenna positions.
< 20 m	The room is filled with furniture and people and penetration through up to 5 dry walls or up to 2 brick walls or up to 2 aero concrete walls.
< 10 m	Identical to the previous case but the receiver is placed to a room corner or range along a narrow floor.
< 1 m	Metal-reinforced ceilings at upright penetration angle (in strong dependence of reinforcement density and antenna positions).

Table 3.1 IntesisBox® coverage distance

3.3.1 Screening zones

It is important not to place the device in a place where the airwaves must go through a metallic object as they create a screening zone where the receivers are not going to be able to receive the EnOcean telegrams. This situation is shown in Figure 3.4a.

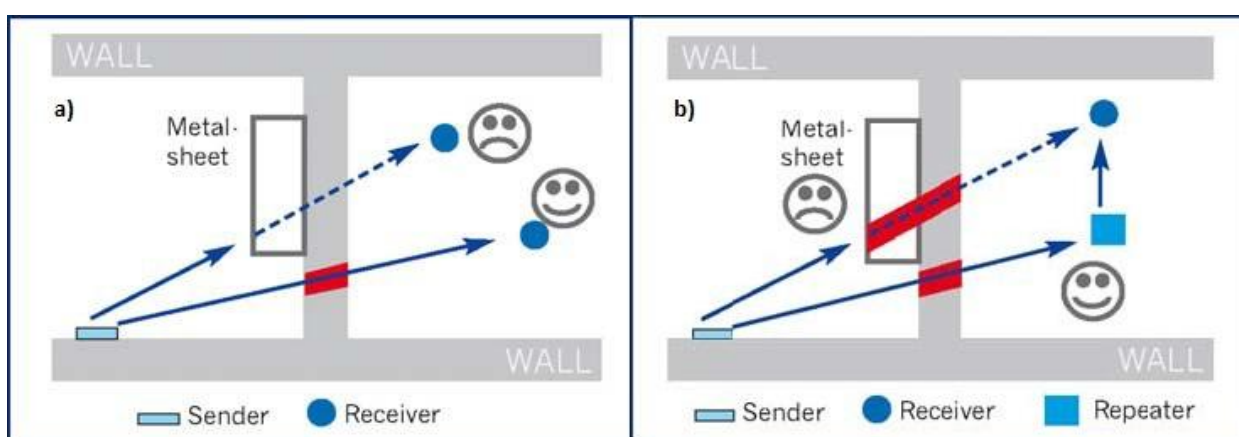


Figure 3.4 a) Screening zone b) Solution with a repeater

The situation of one of the receivers does not allow it to receive the transceiver telegrams. To solve this situation the use of a repeater outside the screening zone (Figure 3.4b) is recommended. The telegrams will be retransmitted from there to the receiver

3.3.2 Penetration Angle

This is the angle in which the airwaves reach a certain object they need to go through. The transmission to the other side of the object would be better as this angle gets closer to 90°, being this the best transmission situation.

In Figure 3.5a it is shown a receiver in a situation where the penetration angle is too close to 0°. The solution to that problem can be seen in Figure 3.5b using a repeater in a different position.

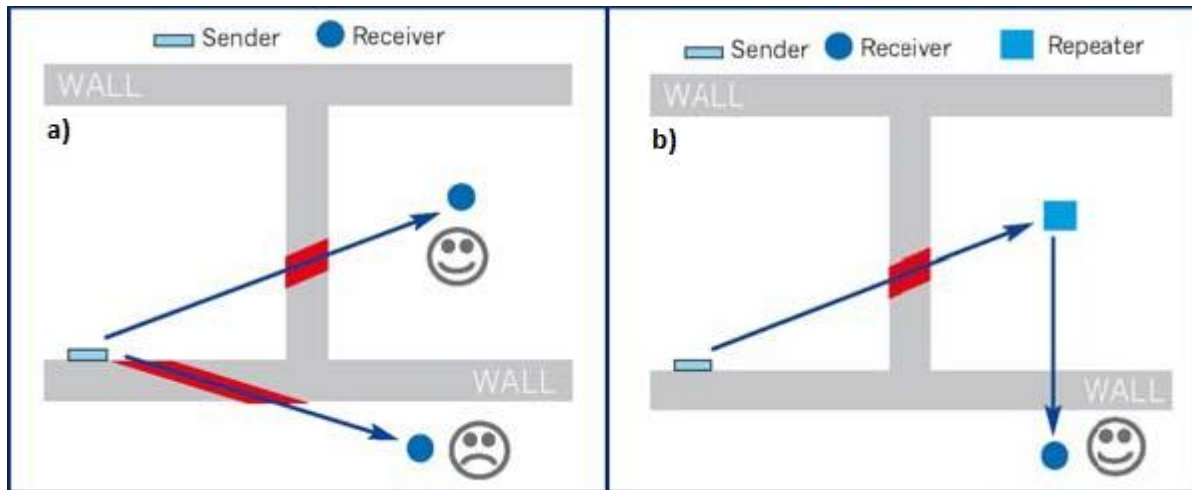


Figure 3.5 a) Penetration angle b) Solution with a repeater

3.3.3 Distance between receiver and sources of interference

The distance between EnOcean receivers, as it is the IntesisBox® and other transmitters (e.g. GSM / DECT / wireless LAN) or high frequency sources of interference (computers, audio and video equipment) should be higher than 50 centimeters.

However, EnOcean transmitters can be installed next to any other high-frequency transmitters without any problem.

3.3.4 Use of repeaters

In case of a poor radio reception, it may be helpful to use a repeater. EnOcean repeaters do not require any configuration, only a line-power supply is needed. A poor radio signal is received, refreshed and transmitted again, so nearly a double radio range can be achieved. Special EnOcean repeaters which can be switched to 2-level function allow two repeaters to be cascaded.

In order to configure the IntesisBox® as a repeater see section 5.3.6.

3.4 Power up

Once the IntesisBox® is properly connected and placed, AC unit's main power can be connected again.

Then it will start an initialization process, L1 will be ON during 3 seconds and L2 will be ON during 5 seconds (see the location of the LEDs in Figure 4.1). The normal operation starts when both LEDs are turned OFF again.

It is important to bear in mind that changes made during the initialization process will not have effect until it finishes.

4. Manual configuration

4.1 Configuration

The IntesisBox® (Figure 4.1) has two sets of switches, a push button and a rotary profile selector in order to configure the behaviour of the device and perform EnOcean actions (explained in Table 4.1, Table 4.2 and following sections).

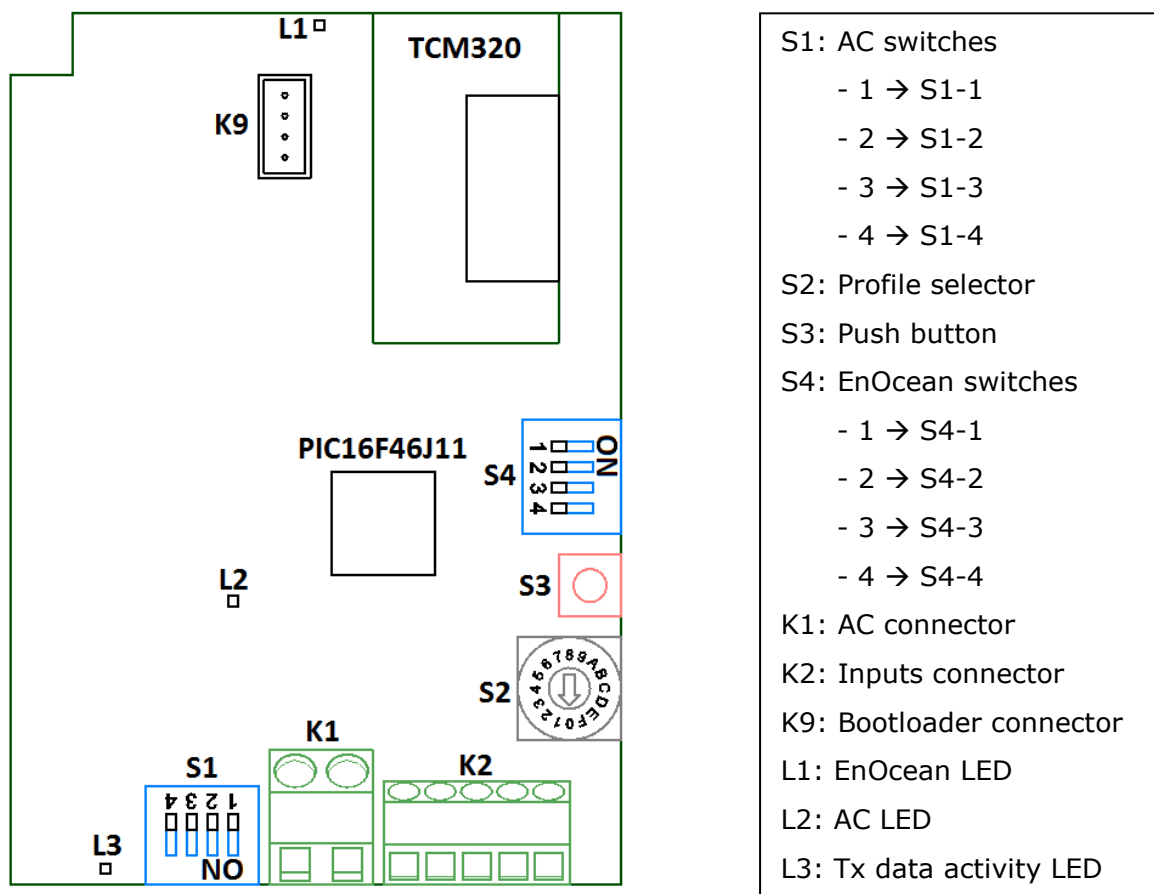


Figure 4.1 IntesisBox® diagram

S1 – AC unit configuration: Master/Slave, Operating Mode, Fan Speeds and Vanes

Binary value $b_0...b_3$	Decimal value	Switches 1 2 3 4	Description
0xxx	0	↓ x x x	Slave (default value) – A Daikin BRC Controller must be present in P1/P2, configured as Master.
1xxx	1	↑ x x x	Master in P1 P2 bus – Daikin BRC Controller not needed in P1/P2. If existing, BRC must be configured as slave.
x0xx	0	x ↓ x x	Master of VRV Operation Mode (For VRV only). See section 6.8.
x1xx	1	x ↑ x x	VRV slave of Operating Mode (For VRV only) (default value)
xx0x	0	x x ↓ x	Indoor unit has 2 Fan Speeds (default value)
xx1x	1	x x ↑ x	Indoor unit has 3 fan speeds
xxx0	0	x x x ↓	Indoor unit has no Vanes
xxx1	1	x x x ↑	Indoor unit has Vanes (default value)

Table 4.1 S1 switch configuration

S4 – EnOcean switches: normal mode, learning mode, erasing mode and remote management enabling/disabling

Binary value b ₃ ...b ₀	Decimal value	Switches 1 2 3 4	Description
00xx	0	↓ ↓ x x	Normal mode (default value). See section 4.2.
01xx	1	↓ ↑ x x	N/A (behaves as normal mode)
10xx	2	↑ ↓ x x	Learning mode. See section 4.3.
11xx	3	↑ ↑ x x	Erasing mode. See section 4.4.
xx0x	0	x x ↓ x	Remote management enabled (default value). See section 4.5.
xx1x	1	x x ↑ x	Remote management disabled.
xxx0	0	x x x ↓	N/A
xxx1	1	x x x ↑	N/A

Table 4.2 S4 switch configuration

The different actions that can be performed in each mode are described in this section.

4.2 Normal mode

While the normal mode is selected it is possible to set the device to monitor mode and perform the teach-in procedure. These operations will not interfere in the normal behaviour of the device.

4.2.1 Monitor mode

Due to the transmitting method (radio) of EnOcean telegrams, is possible that the IntesisBox® is outside the coverage range of one device. For that reason, the interface, as a receiver, has the ability to show when it receives EnOcean telegrams from a linked device when in monitoring mode.

To **activate** the monitoring mode (check Figure 4.1):

1. Make sure that IntesisBox® is working in normal mode (switches S4-1 and S4-2 set to OFF)
2. Press S3 for 5 seconds. The L1 will briefly flash (100ms). From then on, L1 will flash for 100ms each time that a valid telegram from a learnt device is received.

To **disable** the monitoring mode:

1. In order to disable the monitor mode it is necessary to set EnOcean switches (S4) to learning or erase mode. Once S4 is set to normal mode again the monitor mode will be disabled

Mode	L1
Normal mode (monitor mode enabled)	Off
Normal mode (monitor mode disabled)	Flashing (100ms) per telegram received

Table 4.3 L1 and monitor mode

4.2.2 Teach-in

The IntesisBox®, as an EnOcean transmitter device, has the teach-in procedure implemented. The aim of this procedure is to link the IntesisBox® with other EnOcean devices in order to control them, not the other way around.

So after the teach-in procedure it will be possible, for instance, to get the "IntesisBox® Tx profile 0 (On/Off)" linked to another EnOcean device. Then, each time we turn on or off the AC unit, a signal will be sent from the IntesisBox® and accepted by the other EnOcean device.

All the signals will also be sent periodically according to the IntesisBox® configuration (section 5.3.1).

Table 4.4 shows which signals and EEPs correspond to each Tx profile:

Profile Index Tx (S2)	Transmission signals	EEP (EnOcean Profile)
0	On/Off	[05-02-01]
1	Alarm State	[05-02-01]
2	Set point Temperature	[07-02-05]
3	Ambient Temperature	[07-02-05]
4	Ambient Temperature, Set point Temperature, Fan Speed, On/Off	[07-10-01]
5	AC interface: Mode, fan speed, vane position, sensors and On/Off	[07-20-10]
6	Set point Temperature, Ambient Temperature	[07-10-03]
7	AC interface: AC Error code, Error state and disablements	[07-20-11]
8	Input 1	[05-02-01]
9	Input 2	[05-02-01]
A	Input 3	[05-02-01]
B	Input 4	[05-02-01]
C	N/A	
D	N/A	
E	All. AC profiles	[07-20-10] ¹ [07-10-03] [07-20-11]
F	All. AC profiles	[07-20-10] ¹ [07-10-03] [07-20-11]

Table 4.4 Transmission profiles - signals

¹ Multiteach-in process: The three EEPs are sent one after the other pressing the teach-in button only once. Also a Teach-in of the same signals can be done one by one using profiles 5, 6 and 7. See section 6.5.

To execute the **Teach-in procedure** the next steps need to be followed. References to device components refer to Figure 4.1:

1. Set the switches S4-1 and S4-2 to OFF (normal mode).
2. Set the profile selector (S2) to the desired transmission profile for the teach-in procedure.
3. Press S3 to send a teach-in telegram. There must be a receiving EnOcean device in learning mode for the linking to happen.

Remember that after this procedure the IntesisBox® does not keep information from any of the devices.

In section 14 can be found the description of the supported EEPs in each Tx profile.

4.3 Learning mode

The learning procedure allows the IntesisBox® to be controlled by other EnOcean devices.

The IntesisBox® has 14 reception (Rx) profiles. Each Rx profile is assigned to a control signal of the AC unit. Up to 5 devices can be linked to each profile (see exceptions in Table 4.5).

The profiles are as follow:

Profile Index Rx (S2)	Signal	Allowed devices in profile
0	On/Off	5
1	Mode	5
2	Fan Speed	5
3	Up/Down Vane position	5
4	Set point Temperature ¹	5
5	Ambient Temperature (virtual) ^{2 3}	1
6	Window contact	5
7	KEY CARD	5
8	Occupancy sensor	5
9	Up/Down Vane position	5
B	Ambient temperature (Profiles 5 & F have priority over it) ³	1
C & D	N/A	N/A
E	All. AC profiles	5
F	All. AC profile ²	5

Table 4.5 Default reception profiles

¹ When the Virtual temperature is turned on, the set point temperature to be written to the AC unit is the Virtual temperature instead of the Set point temperature.

² When a device is linked to either of these profiles, the virtual temperature function is turned on automatically. Temperature in profile F will have priority (see section 6.2).

³ Only one device can be linked to this profile.

4.3.1 Learning sensors

When learning sensors it is important to bear in mind that just one signal of the EEP of the sensor is going to be linked each time that the Learning procedure is executed. See an example in section 8.3.

To execute the **Learning procedure** the next steps need to be followed. References to device components refer to Figure 4.1:

1. Set switch S4-1 to ON position and switch S4-2 to OFF (Learning mode). L1 will be ON.
2. Set the profile selector (S2) in the desired position to link the EnOcean transmitters to the reception profile.
3. Push the Teach-in button of the devices that want to be linked, or if they do not have the Teach-in button (as the EnOcean switches) action them.
4. When a valid EnOcean telegram is received L1 turns OFF for 100 ms and then it turns ON again. The maximum number of linked devices in one profile is 5 (check Table 4.5 for special cases). Once this number is reached, no more devices are going to be linked to that profile. The L1 turns OFF when that happens.
5. Once the learning procedure is finished set both S4-1 and S4-2 to OFF for a normal operation of the device. Once that is done L1 turns OFF.

In section 14 can be found the EEPs supported in each Rx profile.

4.3.2 Learning gateways

In order to control the IntesisBox® using a gateway, the gateway needs to be learnt by the IntesisBox®. The **Learning procedure** is the following one:

1. Set switch S4-1 to ON position and switch S4-2 to OFF (Learning mode). L1 will be ON.
2. Set the profile selector of the IntesisBox® (S2) to E or F. The difference between them is that using profile F the ambient temperature supplied by the gateway is going to be used instead of the AC one. If no temperature is supplied by the sensor, the IntesisBox® is going to have undesired behaviours.
3. Set the profile selector of the gateway that wants to be linked to F.
4. Push the Teach-in button of the gateway that wants to be linked.
5. When a valid EnOcean telegram is received L1 turns OFF for 100 ms and then it turns ON again. The maximum number of linked devices in one profile is 5. Once this number is reached, no more devices are going to be linked to that profile. The L1 turns OFF when that happens. As a gateway takes 3 devices to be linked, just one will be fully linked in one profile.
6. Once the learning procedure is finished set both S4-1 and S4-2 to OFF for a normal operation of the device. Once that is done L1 turns OFF.

Important!

In Profiles E and F up to 5 devices can be linked. It needs to be taken into account that if the devices are linked by MultiTeach-in procedure (more information in section 6.5) only one is going to be fully linked as it would take 3 of the 5 spaces available.

4.4 Erasing mode

In order to delete the devices that have been learnt the erase mode needs to be selected. It is possible to delete the devices one by one, to delete all the devices linked in one Rx profile (Table 4.5) and perform a "return to factory settings".

4.4.1 Deleting one by one

To delete the linked devices one by one it will be necessary to have the linked device working properly. To do so follow next lines (the references to device components are specified in Figure 4.1):

1. Set the switches S4-1 and S4-2 to ON. L1 will turn into flashing (100 ms on and 100 ms off).
2. Set the profile selector (S2) to the desired Rx profile (Table 4.5) where the device to be deleted is saved.
3. Push the Teach-in button of the device that want to be deleted, or if they don't have the Teach-in button (as the EnOcean switches) action them. Once the telegram is received L1 will be on for 1 second to show that the device has been deleted correctly from this profile.
4. Once finished, set the switches S4-1 and S4-2 to OFF for a normal operation of the device.

4.4.2 Deleting all the devices linked to one profile

A device can break down or be lost, and therefore the above mentioned delete procedure would not be possible to be executed. For that reason all the devices in one profile can be deleted. To do so follow the instructions (the references to device components are specified in Figure 4.1):

1. Set the switches S4-1 and S4-2 to ON. L1 will turn into flashing (100 ms on and 100ms off).
2. Set the profile selector (S2) to the desired Rx profile (Table 4.5).
3. Press the button S3 for 5 seconds. Once that is done the L1 will be on for 1 second to show that all devices in this profile have been deleted.
4. Once finished, set the switches S4-1 and S4-2 to OFF for a normal operation of the device.

4.4.3 Return to factory settings

When a return to factory settings is performed, all the devices linked to all the Rx profiles will be deleted. It will also set the configuration to its default values (section 5.4). Follow the steps below in order to perform the return to factory settings (the references to device components are specified in Figure 4.1):

1. Set the switches S4-1 and S4-2 to ON. L1 will turn into flashing (100 ms on and 100ms off).
2. Press the button S3 for 10 seconds. After the first 5 seconds L1 will turn on during 1 second indicating that all the devices in the current Rx profile have been deleted, and then it will continue with the flashing. After 10 seconds pressing S3, L1 and L2 will turn on during 1 second and the device will reset itself.
3. Once finished, set the switches S4-1 and S4-2 to OFF for a normal operation of the device.

4.5 Remote management disablement

In order to prevent the IntesisBox® from being configured remotely, the remote management has to be disabled by setting the switch S4-3 to ON according to Table 4.2. Once the remote management is disabled, the Intesis Configuration Software will not be able to communicate with the IntesisBox®. It still will be possible to configure the IntesisBox® manually.

5. Remote configuration

In this section is shown how the IntesisBox® can be configured using the Intesis Configuration Software.

For a more detailed explanation see the documentation of Intesis Configuration Software.

5.1 Reception profiles

Reception channels where up to 5 devices can be linked (see exceptions in Table 4.5). The links can be also achieved using the manual learning procedure (section 4.3).

Index	Devices	Signals		
0	Device_8263, Device_EE39, Device_02E2	On/Off	+	-
1	Device_EE39	Mode	+	-
2	Device_1234	Fan Speed	+	-
3		Up/Down Vane position	+	-
4	Device_8263	Setpoint Temp	+	-
5		Ambient Temp	+	-
6	Device_A605	Window Contact	+	-
7		On/Off (KeyCard only)	+	-
8		Occupancy	+	-
9		Up/Down Vane position	+	-
10		Left/Right Vane position	+	-
11		Ambient Temp (Sensing temperature only)	+	-
14		On/Off, Window Contact, Setpoint Temp	+	-
15		On/Off, Window Contact, Setpoint Temp, Ambient Temp	+	-

Tx Table Rx Table Configuration Information

Figure 5.1 Reception profiles with their associated signals and devices

5.2 Transmission profiles

Transmission channels to be used to teach the IntesisBox® into other devices. As in the reception channels, the procedure can be done manually just following the steps of the teach-in procedure (section 4.2.2).

Index	EEP	Signals	ID	
0	[05 02 01]	On/Off	FF8802E0	Teach
1	[05 02 01]	Alarm State	FF8802E1	Teach
2	[07 02 05]	Setpoint Temp	FF8802E2	Teach
3	[07 02 05]	Ambient Temp	FF8802E3	Teach
4	[07 10 01]	Ambient Temp, Setpoint Temp, Fan Speed, On/Off	FF8802E4	Teach
5	[07 20 10]	Mode, Fan Speed, Up/Down Vane position, On/Off	FF8802E5	Teach
6	[07 10 03]	Setpoint Temp, Ambient Temp	FF8802E6	Teach
7	[07 20 11]	Window Contact, Alarm Code, Disablement, Alarm State	FF8802E7	Teach
8	[05 02 01]	Input 1	FF8802E8	Teach
9	[05 02 01]	Input 2	FF8802E9	Teach
10	[05 02 01]	Input 3	FF8802EA	Teach
11	[05 02 01]	Input 4	FF8802EB	Teach
15	[07 20 10] [07 20 11] [07 10 03]	All	FF8802EF	Teach

[Tx Table](#)
[Rx Table](#)
[Configuration](#)
[Information](#)

Figure 5.2 Transmission channels with their EEPs and unique IDs

5.3 Configuration

Using the Intesis Configuration Software it is possible to configure the behaviour of the IntesisBox®, its advanced functionality and the binary inputs.

Machine Operation

Index Name	Units	Value	Description	Allowed range
30 Machine Mode	<enum>	NORMAL	In "LIMITED_SETPOINT", machine setpoint range is adjusted to its current mode. In "AUTOCHANGEOVER", mode is decided automatically using Ambient Temp. Then, setpoint range is adjusted dynamically. In "NORMAL", no action is performed. Setpoint limits are the same to the machine.	
31 Threshold Ambient Temp. Cool	°C	26	Temperature above which machine is changed to mode Cool, when "AUTOCHANGEOVER" is configured.	Range: 16 .. 30
32 Threshold Ambient Temp. Heat	°C	21	Temperature under which machine is changed to mode Heat, when "AUTOCHANGEOVER" is configured.	Range: 16 .. 30
33 Min Setpoint Cool	°C	24	Minimum setpoint allowed when machine is in Cool mode and "LIMITED_SETPOINT" mode is configured.	Range: 16 .. 30
34 Max Setpoint Cool	°C	28	Maximum setpoint allowed when machine is in Cool mode and "LIMITED_SETPOINT" mode is configured.	Range: 16 .. 30
35 Min Setpoint Heat	°C	19	Minimum setpoint allowed when machine is in Heat mode and "LIMITED_SETPOINT" mode is configured.	Range: 16 .. 30
36 Max Setpoint Heat	°C	23	Maximum setpoint allowed when machine is in Heat mode and "LIMITED_SETPOINT" mode is configured.	Range: 16 .. 30
37 Wake Up Time	seconds	120	Time interval to send periodically EnOcean data telegrams. Every Tx profile is updated, at least, at this time interval	Range: 100 .. 510

Window Operation

Index Name	Units	Value	Description	Allowed range
1 Window reload last value	<bool>	False	If true, previous on/off state is restored when all windows are closed	
2 Window lock when open	<bool>	True	If true, on/off state is forced to 'off' while window contact is opened	
3 Window Timeout	minutes	1	Timeout to turn off the Machine when a window is opened	Range: 0 .. 30

[Tx Table](#)
[Rx Table](#)
[Configuration](#)
[Information](#)

Keycard Operation
 Occupancy Operation
 Input Operation
 Radio Operation

Figure 5.3 IntesisBox® parameter configuration

Each one of the parameters is explained in the following sections:

5.3.1 Machine operation

Machine mode: three different operation modes related to the setpoint temperature can be selected:

- NORMAL: no action is performed; the setpoint limits are defined by the AC unit.
- LIMITED SETPOINT: the setpoint range is adjusted depending on the current mode.
- AUTOCHANGEOVER: mode is decided automatically depending on the ambient temperature; setpoint range is adjusted dynamically.

Threshold ambient temperature cool: temperature above which the AC unit will be set to cool mode (when AUTOCHANGEOVER is configured).

Threshold ambient temperature heat: temperature under which the AC unit will be set to cool mode (when AUTOCHANGEOVER is configured).

Min. setpoint cool: minimum setpoint allowed when AC unit is in cool mode (when LIMITED SETPOINT is configured).

Max. setpoint cool: maximum setpoint allowed when AC unit is in cool mode (when LIMITED SETPOINT is configured).

Min. setpoint heat: minimum setpoint allowed when AC unit is in heat mode (when LIMITED SETPOINT is configured).

Max. setpoint heat: maximum setpoint allowed when AC unit is in heat mode (when LIMITED SETPOINT is configured).

5.3.2 Window operation

Window reload last value: if true, previous ON/OFF state is restored when all windows are closed.

Window lock when open: if true, ON/OFF state is forced to OFF while a window is opened.

Window timeout: timeout to turn OFF the AC unit when a window is opened.

5.3.3 Keycard operation

Keycard reload last value: if true, previous ON/OFF state is restored when a key card is inserted.

Keycard lock when not inserted: if true, ON/OFF state is forced to OFF while no key card is inserted.

5.3.4 Occupancy operation

Occupancy duration: time while the last occupancy signal is considered valid.

Occupancy 1st action timeout: if no valid occupancy signal is received during this time, action 1 will be executed.

Occupancy 1st action: occupancy action type:

- APPLY_DELTA: it will apply an increment of temperature depending on the mode.
- SWITCH_OFF: the AC unit will be switched OFF.

Occupancy 1st action delta heat: if action 1 is configured as APPLY_DELTA, increment to apply in heat mode.

Occupancy 1st action delta cool: if action 1 is configured as APPLY_DELTA, increment to apply in cool mode.

Occupancy 2nd action active: if true, the 2nd action will be performed as well.

Occupancy 2nd action timeout: if no valid occupancy signal is received during this time, action 2 will be executed.

Occupancy 2nd action: occupancy action type:

- APPLY_DELTA: it will apply an increment of temperature depending on the mode.
- SWITCH_OFF: the AC unit will be switched OFF.

Occupancy 2nd action delta heat: if action 2 is configured as APPLY_DELTA, increment to apply in heat mode.

Occupancy 2nd action delta cool: if action 2 is configured as APPLY_DELTA, increment to apply in cool mode.

Occupancy reload last value: if true, previous ON/OFF state is restored when the room is occupied.

Occupancy lock when unoccupied: if true, ON/OFF state is forced to OFF while the room is unoccupied.

5.3.5 Input operation

There are three configurable parameters per each input, so X is valid from 1 to 4 in the following lines:

Input X inverted: input X logic inversion, if true input X is inverted.

Input X function: input X can be configured in order to behave as:

- NONE: input X is only transmitted to EnOcean, with any other effect.
- ON_OFF: input X is able to change the ON/OFF state of the AC unit.
- WINDOW_CONTACT: input X is used as a window contact.
- KEY_CARD: input X behaves as a key card reader.
- OCCUPANCY: input X is used as an occupancy sensor.

Input X key card: input X is transmitted to EnOcean as a key card, which means that just one telegram will be sent per each change on the state of input X.

5.3.6 Radio operation

Repeater enable: EnOcean repeater function enablement.

Repeater level: EnOcean repeater function mode, if repeater is disabled, this parameter is not significant. It can be configured as:

- Disabled: no telegrams will be repeated.
- 1-LEVEL: original telegrams will be repeated.
- 2-LEVEL: original and repeated telegrams will be repeated.

IR disablement: disablement of the AC remote control. If this value is true, AC remote control will be overridden by the gateway.

5.4 Default values

Parameter	Default value	Units
Machine mode	NORMAL	<enum>
Threshold ambient temperature cool	26	°C
Threshold ambient temperature heat	21	°C
Min. setpoint cool	24	°C
Max. setpoint cool	28	°C
Min. setpoint heat	19	°C
Max. setpoint heat	23	°C
Wake up time	120	seconds
Window reload last value	False	<bool>
Window lock when open	True	<bool>
Window timeout	1	minutes
Key card reload last value	False	<bool>
Key card lock when not inserted	True	<bool>
Occupancy duration	40	seconds
Occupancy 1 st action timeout	10	minutes
Occupancy 1 st action	APPLY_DELTA	<enum>
Occupancy 1 st action delta heat	-2	°C
Occupancy 1 st action delta cool	2	°C
Occupancy 2 nd action active	True	<bool>
Occupancy 2 nd action timeout	30	minutes
Occupancy 2 nd action	SWITCH_OFF	<enum>
Occupancy 2 nd action delta heat	-3	°C
Occupancy 2 nd action delta cool	3	°C
Occupancy reload last value	False	<bool>
Occupancy lock when unoccupied	False	<bool>
Input 1..4 inverted	False	<bool>
Input 1..4 function	NONE	<enum>
Input 1..4 key card	False	<bool>
Repeater enable	False	<bool>
Repeater level	Disabled	<enum>
IR disablement	False	<bool>

Table 5.1 Default values

6. Special Behaviours

In this section it is explained the special behaviour of the IntesisBox® when certain kinds of devices are used: window contacts, thermostats with external temperature sensor, occupancy sensors and key cards. The use of these sensors needs further explanation as the IntesisBox® carries out special operations or assumes previous states. All the explanations in these sections are related to the factory settings of the device.

6.1 Window contact

The IntesisBox® has the functionality to automatically control the turning on and off of the AC indoor unit depending on the state of one or several (up to 5) EnOcean window contacts.

EnOcean window contacts periodically send its state and they do so too after a change in the window state.

When a window contact is associated to the IntesisBox® interface it is assumed that the window is closed until the correct state of the window contact is received.

The AC indoor unit will be turned OFF and disabled if **any** of the window contacts linked to the window contact profile is sending a "window opened" message for a certain period of time (default value: 1 minute). If the AC indoor unit is set to ON (either by an EnOcean device or by the remote control) the IntesisBox® will set it back to OFF.

When all the window contacts are sending a "window closed" message, the AC indoor unit will stay OFF but it will be possible to turn it ON.

The functionality specified on the above lines would only be active when devices are linked in the window contact profile (Table 4.5).

The information about the states of the linked window contacts would be lost if there is a power down in the system, but it will restore itself in a brief period of time as the window contacts send their state periodically.

6.2 External temperature sensors. Virtual temperature

This behaviour is only activated when there is an external temperature device linked to either profile 5 or profile F. If both profiles have a temperature sensor linked, the one in profile F will have priority and the one in profile 5 will be ignored. If no temperature is supplied by the sensor, the IntesisBox® is going to have undesired behaviours.

Four temperatures are involved:

- Set point temperature: It is the set point temperature sent to the AC unit (S)
- Return path temperature: It is the ambient temperature sent by the AC unit (T_r)
- Virtual set point temperature: It is the set point temperature requested by the thermostat (S_v)
- Virtual ambient temperature: It is the ambient temperature measured by the thermostat (T_v)

The set point temperature sent to the AC indoor unit is calculated with the following formula:

$$S = S_v - (T_v - T_r)$$

6.3 Key card

Due to the way the key card reader works there is a specific reception profile for it. In this profile (Table 4.5) it is possible to link up to five devices. If the linked device is not a key card the correct behaviour of the IntesisBox® cannot be granted.

When inserting the key card in the reader, the AC unit is enabled (becomes available to be turned on) but it stays OFF. A manual actuation of another device would be needed to turn it ON.

When the key card is removed, the AC unit is disabled and turned OFF, staying in this state until we insert the key card again. If the AC indoor unit is set to ON (either by an EnOcean device or by the remote control) the IntesisBox® will set it back to OFF.

The functionality specified on the above lines would only be active when devices are linked in the key card profile (Table 4.5).

The information about the state of the linked key card would be lost if there is a power down in the system. Therefore it would be needed to set the previous state by actuating the key card.

6.4 Occupancy sensors

The IntesisBox® has the functionality to automatically control the behaviour of the AC unit depending on the state of one or several (up to 5) EnOcean occupancy sensors.

When all the occupancy sensors linked to the device are not detecting any occupancy, the IntesisBox® will go to non-presence mode following these steps:

1. Wait a certain time period (default value: 10 minutes) where no action is performed.
2. When this time expires the set point temperature will change depending on the mode. In cool mode the set point would increase 2°C and in heat mode would decrease 2°C. If any other mode the set point temperature would not be changed.
3. After a second period of time (default value: 30 minutes) the AC unit will be turned OFF.

If a presence is detected the system will work as follows:

1. After step 2: recovers previous set point temperature.
2. After step 3: recovers previous set point temperature but AC unit remains OFF.

The explained functionality will only be valid if the occupancy sensors are linked in the occupancy profile (Table 4.5).

The information about the state of the linked occupancy sensors would be lost if there is a power down in the system. It will recover as soon as a presence signal is received.

6.5 MultiTeach-in procedure

AC units have a lot of parameters to control and supervise and with only one 4BS telegram all this information cannot be fitted in. For this reason the IntesisBox® implements, besides standard Teach-in, a MultiTeach-in procedure where more than one EEP is sent at the same time in order to be linked. In the next lines this procedure is going to be further explained.

This procedure is performed only when the profile selector (S2) is set to profiles E or F (the ones that implement the HVAC generic EEPs). The way it is implemented is simple. A different Base ID is assigned to each EEP and it is actually performing 3 consecutive teach-in procedures. This allows devices that support the 3 EEP's to automatically link them.

It might happen that the device in learning mode does not support the MultiTeach-in procedure. In that case profiles 5, 6 and 7 can be used in order to perform the Teach-in one by one due to the fact that these profiles have the same EEPs as profile E or F.

It needs to be taken into account that used in this profile the IntesisBox® is working as if it was three different EnOcean devices at a time.

If this procedure is performed in the opposite way (the IntesisBox® is in Learning mode in profile E or F) 3 devices positions would be taken, implying that only 1 device using MultiTeach-in would be able to be fully linked in each profile. If tried again with another device only 2 of the different EEPs are going to be stored.

6.6 Binary inputs

The device IntesisBox® has four potential-free binary inputs. Each one of these inputs can be configured to behave according to the following functionalities:

- a) NONE: Input state is sent but no other action is performed.
- b) ON_OFF: Input is able to change the ON/OFF state of the AC unit.
- c) WINDOW_CONTACT: Input is used as a window contact.
- d) KEY_CARD: Input behaves as a key card reader.
- e) OCCUPANCY: Input is used as an occupancy sensor.

By default, the four inputs are configured as NONE.

6.7 Setpoint

When a device is linked to Rx profile 4, E or F, it will be able to modify the setpoint temperature of the AC unit. Nevertheless the following differences between these profiles must be taken into account (check the supported EEPs for each profile in section 14):

- *Profile E & F:* the setpoint temperature is sent through one byte of the EEP (0...255), and its scale will always be 0...40°C.
- *Profile 4:* the setpoint can be sent either by a rocker switch (it will increment/decrement the setpoint) or through one byte of the EEP (0...255). In case of an EEP which sends one byte for the setpoint, its scale will be MIN.SETPOINT...MAX.SETPOINT. Depending on the mode of the AC unit and the configuration of machine mode (see section 5.3.1), the value of MIN. SETPOINT and MAX. SETPOINT could change. Therefore the scale of the setpoint in profile 4 might change depending on the AC unit's mode and machine mode's configuration.

6.8 Master of mode

The master of mode only applies under the following conditions:

1. The AC system is VRV
2. The VRV system uses a Heat pump outdoor unit
3. The IntesisBox® is configured as Master of the P1/P2 bus (Table 4.1)

If they are not matched the parameter is going to be ignored.

The Heat pump outdoor unit of a VRV system can only work in one mode (either Heat, Cool or fan). The Master of mode is the indoor unit that defines which is the working mode of the outdoor unit. If there is no Master of mode in the system the first AC unit to be turned ON is the one controlling the mode.

In a VRV system there can only be one device acting as Master of Mode. If more than one is configured this way the system is not going to work properly.

When the IntesisBox® is configured as Master of Mode it can control all the modes of the system. The Mode selection of all the other gateways and remote controllers is going to be affected by the one chosen by the Master of Mode (detailed in Table 6.1).

Master of Mode	Slave of Mode
Heat	Heat, Fan
Dry	Cool, Fan, Dry
Fan	Fan
Cool	Cool, Fan, Dry

Table 6.1 Mode correspondence

7. Status monitoring

The interface IntesisBox® has three LEDs that show information about the operation of the device.

The LED L1 (see Figure 4.1) is associated to the EnOcean section and the LED L2 to the AC one (AC LED).

7.1 L2 (yellow): AC monitoring

In Table 7.1 it is shown how the AC LED L2 behaves and its meaning

Device status	LED (L2) state	ON / OFF Period	Meaning
Turning on	Pulse	ON during 5 seconds	Initialization process after start up or reset
During normal operation	Flashing	100ms ON 1900ms OFF	Normal Operation
During normal operation	Blinking	500ms ON 500ms OFF	AC unit error / communication error

Table 7.1 IntesisBox® state and AC LED

7.2 L1 (green): EnOcean monitoring

EnOcean LED L1 will behave according to the following table:

Device status	LED (L1) state	ON / OFF Period	Meaning
Turning on	Pulse	ON during 3 seconds	Initialization process after start up or reset
Learning mode	ON	ON	Devices can be learnt in the selected profile
Erasing mode	Blinking	100ms ON 100ms OFF	Erase mode, see section 4.4
Comm. monitoring enabled	Flashing	100ms ON	A telegram has been received in normal mode, see section 4.2

Table 7.2 EnOcean LED

7.3 L3 (green): Tx data activity LED

It will behave according to the transmission data activity from the IntesisBox® to AC unit / remote controller.

8. How to?

8.1 Check if my AC unit can be controlled with the IntesisBox®

See section 11.

8.2 Disable AC remote controller

There are a two ways to perform this functionality:

- a) Set the "IR disablement" parameter to true using the Intesis Configuration Software (see section 5.3.6).
- b) Sending a telegram using the EEP [07-20-11], in receive mode, setting the bit DB0.2 to 1 (see section 12). It is important to bear in mind that the transmitter device needs first to be learnt by the IntesisBox®.

8.3 Link sensors to the IntesisBox®

It can be done either manually (section 4.3.1) or remotely (section 5.1).

It is important to know that just one signal of the EEP of the sensor is going to be linked. See an example of how an Intesis thermostat (IS-TK04PST) will behave depending on the way it is linked:

- If an IS-TK04PST is linked to the Rx profile 0 (On/Off), it will only be possible to turn on or off the AC unit connected to the IntesisBox® using the IS-TK04PST's switch. It will not be possible to change the fan speed, setpoint or ambient temperature.
- If the IS-TK04PST is linked now to Rx profile 2 (fan speed), the fan speed will be changed by the IS-TK04PST's fan speed switch. At this point the IS-TK04PST is linked to both signals, so it will change the fan speed and it will turn on or off the AC unit.
- The IS-TK04PST will be fully functional if it is linked to the corresponding profiles:
 - o On/Off -> Rx profile 0
 - o Fan speed -> Rx profile 2
 - o Set point -> Rx profile 4
 - o Ambient temperature -> Rx profile 5

8.4 Control & monitor the IntesisBox® from an EnOcean gateway

In order to control the IntesisBox® from a gateway it will be necessary to learn this gateway first. To monitor the IntesisBox® from a gateway, the Teach-in procedure will have to be executed.

- a) Learn the gateway in profile E or F. See section 4.3.2.
- b) Teach profile F to the gateway. See section 4.2.2.

8.5 Control & monitor the IntesisBox® from a software application

- a) Control the IntesisBox® from a software application:

Follow the steps in section 4.3.2 (learning gateways) and instead of steps 3 and 4 (selecting profile F and pressing the Teach-in button of the gateway), three Teach-in telegrams corresponding to EEPs 07-20-10, 07-20-11 and 07-10-03 must be sent by the software application.

See the description of the Teach-in telegrams structure in section 12.

- b) Monitor the IntesisBox® from a software application:

Teach profile F to the software application. See section 4.2.2.

8.6 Configure parameters

The IntesisBox® parameters can be configured using the Intesis Configuration Software (section 5.3).

8.7 Check if the devices have been correctly learnt

- a) Using the Intesis Configuration Software, load the reception profiles and check that the device has been learnt in the correct profile.
- b) Enable monitor mode (section 4.2.1) and check if the device has been learnt or. It will not be possible to know if it is learnt in the desired profile.

8.8 Protect the IntesisBox® from undesired remote access

It can be achieved either by remote configuration or using the switch S4-3. Even both protection methods can be performed:

- a) If using remote configuration: See Intesis Configuration Software documentation.
- b) If using manual configuration: Section 4.5.

8.9 Improve radio coverage of IntesisBox®

It is important to set the antenna cable as much straight as possible, trying to avoid angles in this cable and with no loops.

Changing the location of the antenna cable might improve the radio coverage of the IntesisBox®, which will depend on the position of the IntesisBox®.

9. Technical data and dimensions

Enclosure	ABS (UL 94 HB). 2,5 mm thickness
Dimensions	70 x 100 x 28 mm
Weight	90g
Colour	White
Power supply	12V, 80mA typical Doesn't require external power supply (supplied by the AC Unit)
Mounting	Wall.
LED indicators (internal)	1 x AC unit state 1 x EnOcean state 1 x Tx data activity
Binary inputs	4 x Potential-free binary inputs (dry contacts) Signal cable length: 5m unshielded, may be extended up to 20m with twisted. Compliant with the following standards: IEC61000-4-2 : level 4 - 15kV (air discharge) - 8kV (contact discharge) MIL STD 883E-Method 3015-7 : class3B
Configuration	Manual procedures: Teach-in and Learning Remote wireless Configuration from PC
Operating Temperature	From -25°C to 85°C
Operating humidity	<93% HR, no condensation
Stock humidity	<93% HR, no condensation
RoHS conformity	Compliant with RoHS directive (2002/95/CE).
Certifications	DK-RC-ENO-1i: <ul style="list-style-type: none"> CE conformity to EMC directive (2004/108/EC) and Low-voltage directive (2006/95/EC) <ul style="list-style-type: none"> EN 61000-6-2 EN 61000-6-3 EN 60950-1 EN 50491-3 DK-RC-ENO-1iC: <ul style="list-style-type: none"> FCC (ID: SZV-STM300C) IC (ID: 5713A-STM300C)

Table 9.1 Technical data

10. Dimensions

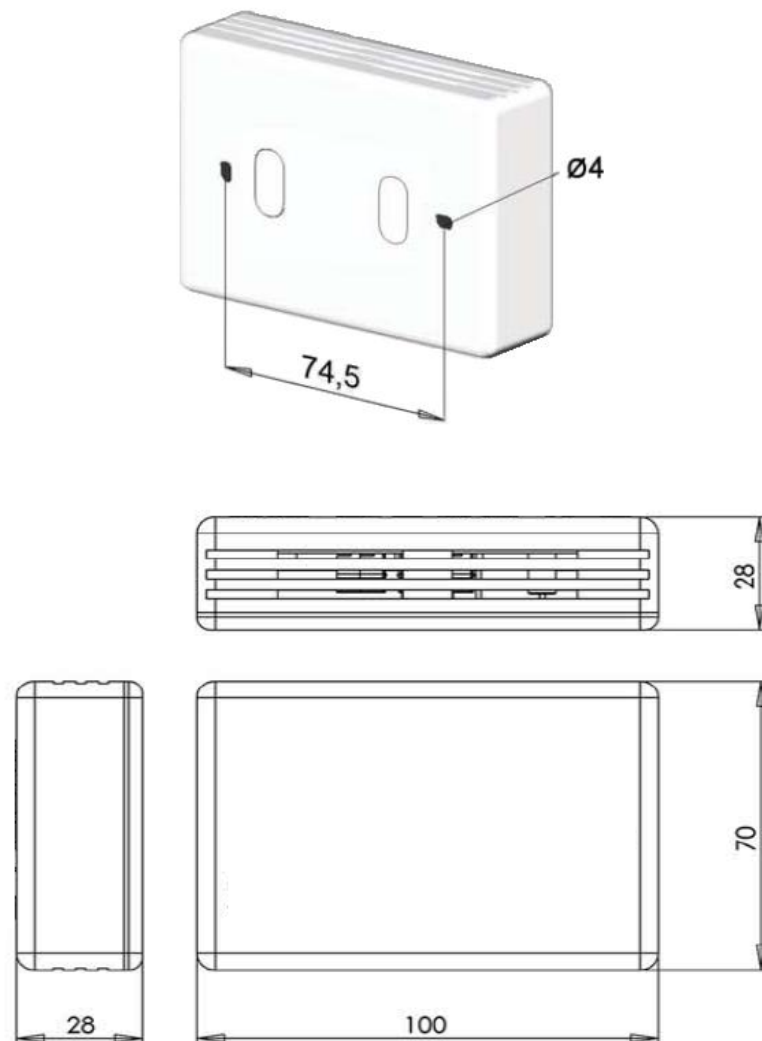


Figure 10.1 IntesisBox® dimensions in mm

11. AC Unit Types compatibility

A list of Daikin indoor unit model references compatible with DK-RC-ENO-1i / 1iC and their available features can be found in:

http://www.intesis.com/pdf/IntesisBox_DK-RC-xxx-1_AC_Compatibility.pdf

12. AC profile data (Generic HVAC interface)

In this section the *Generic HVAC interface* EEPs (07-20-10 and 07-20-11) applied to the IntesisBox® are explained. These two EEPs along with the *Room Operating Panel* EEP 07-10-03 can transmit and receive all the AC information.

Following description will only apply for profiles E and F.

12.1 EEP: 07-20-10

ORG = 07 (4 BS)

FUNC = 20 (HVAC Components)


TYPE = 10 (Generic HVAC interface – Functions: Mode, vane position, fan speed, sensors and on/off)

EEP for Generic HVAC interface – Functions: Mode, vane position, fan speed, sensors and on/off: With this EEP plus the already existing EEP 07-10-03 and 07-20-11 all the information of AC indoor unit can be sent and received allowing a much easier and complete control of these units.

Teach-In

The teach-in telegram has the same structure as a normal 4BS telegram.

See EnOcean Equipment Profiles (EEP) v2.1 and use the following structure.

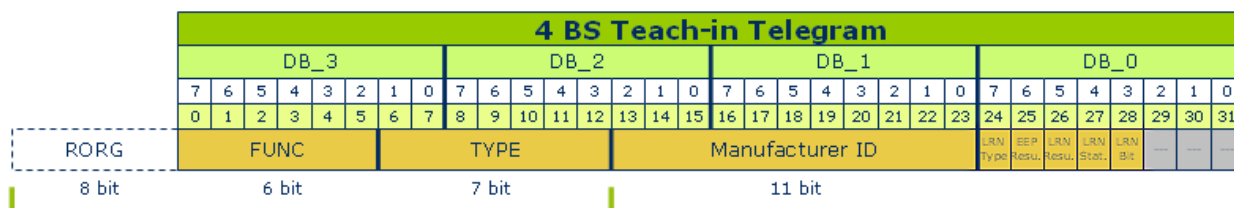

DB_3.7 ... DB_3.2:	Function: same as teach-in telegram heating valve = 20
DB_3.2 ... DB_2.3:	Type: same as teach-in telegram actuator = 10
DB_2.2 ... DB_1.0:	Manufacturer: Intesis Software ID = 0x019
DB_0.7:	LRN TYPE = 0b1 (type 1 with profile, manufacturer Id)
DB_0.6:	EEP result; EEP supported = 0b1, EEP not supported = 0b0
DB_0.5:	LRN result; ID stored = 0b1, ID deleted (not stored) = 0b0
DB_0.4:	TA: teach-in answer = 0b1
DB_0.3:	LRN Learn button 0b0 Teach-in telegram 0b1 Data telegram
DB_0.2 ... DB_0.0:	Not used

EEP: 07-20-10 (CONTINUATION)

DATA BYTES

Receive mode: Commands received by the HVAC interface

DB_3	Mode ¹	0	Auto
		1	Heat
		3	Cool
		9	Fan only
		14	Dehumidification (dry)
		15 ... 32	Not supported
		33 ... 254	Reserved
		255	N/A ²
DB_2.7 ... DB_2.4	Vane position	0	Not supported
		1	Position 1
		2	Position 2
		3	Position 3
		4	Position 4
		5	Position 5
		6	Not supported
		7 ... 10	Reserved
		11	Swing
		12 ... 14	Not supported
		15	N/A
DB_2.3 ... DB_2.0	Fan Speed	0	Not supported
		1	Fan speed 1
		2	Fan speed 2
		3	Fan speed 3
		4...14	Sets the value to max. fan speed
		15	N/A
DB_1	Not used		
DB_0.3	Learn Button	0b0	Teach-in telegram
		0b1	Data telegram
DB_0.2 ... DB_0.1	Room occupancy	00:	Occupied
		01:	StandBy (waiting to perform action)
		10:	Unoccupied (action performed)
		11:	Off (no occupancy and no action)
DB_0.0	On/Off	0b0	Off
		0b1	On

¹ Other modes don't apply to this AC interface. If any other received it would behave as if it had received and N/A² N/A stands for No Action. It keeps the current value of the parameter

EEP: 07-20-10 (CONTINUATION)

Transmit mode: Commands sent by the HVAC interface

DB_3	Mode ¹	0	Auto
		1	Heat
		3	Cool
		9	Fan only
		14	Dehumidification (dry)
		15 ... 32	Not supported
		33 ... 254	Reserved
		255	N/A ²
DB_2.7 ... DB_2.4	Vane position	0	Not supported
		1	Position 1
		2	Position 2
		3	Position 3
		4	Position 4
		5	Position 5
		6	Not supported
		7 ... 10	Reserved
		11	Swing
		12 ... 14	Not supported
		15	N/A
DB_2.3 ... DB_2.0	Fan Speed	0	Not supported
		1	Fan speed 1
		2	Fan speed 2
		3	Fan speed 3
		4...14	Not supported
		15	N/A
DB_1	Not used		
DB_0.3	Learn Button	0b0	Teach-in telegram
		0b1	Data telegram
DB_0.2 ... DB_0.1	Room occupancy	00:	Occupied
		01:	StandBy (waiting to perform action)
		10:	Unoccupied (action performed)
		11:	Off (no occupancy and no action)
DB_0.0	On/Off	0b0	Off
		0b1	On

¹ Other modes don't apply to this AC interface. It will only send this ones² N/A: it is send when the value of the parameter is not known

12.2 EEP: 07-20-11

ORG = 07 (4 BS)

FUNC = 20 (HVAC Components)


TYPE = 11 (Generic HVAC interface – Error control: AC Error code, Error states and disablements)

EEP for Generic HVAC interface – Functions: : Error control: AC Error code, Error states and disablements: With this EEP plus the already existing EEP 07-10-03 and 07-20-10 all the information of AC indoor unit can be sent and received allowing a much easier and complete control of these units.

Teach-In

The teach-in telegram has the same structure as a normal 4BS telegram.

See EnOcean Equipment Profiles (EEP) v2.1 and use the following structure.

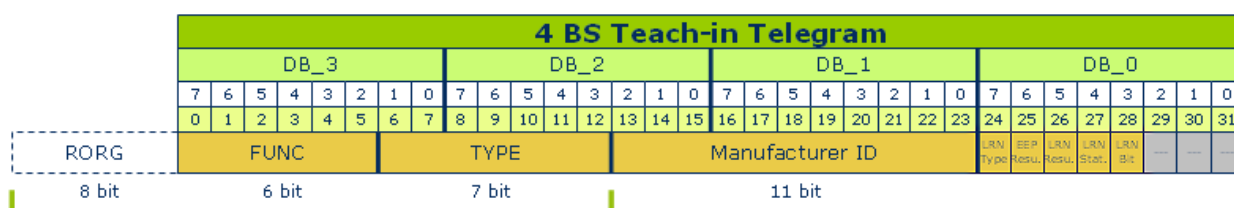

DB_3.7 ... DB_3.2:

Function: same as teach-in telegram heating valve = 20

DB_3.2 ... DB_2.3:

Type: same as teach-in telegram actuator = 11

DB_2.2 ... DB_1.0:

Manufacturer: Intesis Software ID = 0x019

DB_0.7:

LRN TYPE = 0b1 (type 1 with profile, manufacturer Id)

DB_0.6:

EEP result; EEP supported = 0b1, EEP not supported = 0b0

DB_0.5:

LRN result; ID stored = 0b1, ID deleted (not stored) = 0b0

DB_0.4:

TA: teach-in answer = 0b1

DB_0.3:

LRN Learn button 0b0 Teach-in telegram
 0b1 Data telegram

DB_0.2 ... DB_0.0:

Not used

EEP: 07-20-11 (CONTINUATION)

DATA BYTES

Receive mode: Commands received by the HVAC interface

DB_3	Not used		
DB_2	Not used		
DB_1.7 ... DB_1.1	Not used		
DB_1.0	External disablement	0b0	Not disabled
		0b1	Disabled
DB_0.3	Learn Button	0b0	Teach-in telegram
		0b1	Data telegram
DB_0.2	Disable remote controller	0b0	Enable Remote controller
		0b1	Disable Remote controller
DB_0.1	Window contact	0b0	Windows opened
		0b1	Windows closed
DB_0.0	Not used		

Transmit mode: Commands sent by the HVAC interface

DB_3	Error code HI		Generated by A.C (Table 10.1)
DB_2	Error code LO		Generated by A.C (Table 10.1)
DB_1.7 ... DB_1.4	Reserved	0x00	
DB_1.3	Other disablement	0b0	Not Used
DB_1.2	Window contact disablement	0b0	Not disabled
		0b1	Disabled
DB_1.1	Key card disablement	0b0	Not disabled
		0b1	Disabled
DB_1.0	External disablement	0b0	Not disabled
		0b1	Disabled
DB_0.3	Learn Button	0b0	Teach-in telegram
		0b1	Data telegram
DB_0.2	Disable remote controller	0b0	Enable Remote controller
		0b1	Disable Remote controller
DB_0.1	Window contact	0b0	Windows opened
		0b1	Windows closed
DB_0.0	Alarm State	0b0	OK
		0b1	Error

12.3 EEP: 07-10-03

ORG = 07 (4 BS)

FUNC = 10 (Room Operating Panel)


TYPE = 03 (Temperature Sensor, Set Point Control)

EEP for Room Operating Panel – Functions: Temperature Sensor, Set Point Control: With this EEP plus the already existing EEP 07-20-11 and 07-20-10 all the information of AC indoor unit can be sent and received allowing a much easier and complete control of these units.

Teach-In

The teach-in telegram has the same structure as a normal 4BS telegram.

See EnOcean Equipment Profiles (EEP) v2.1 and use the following structure.

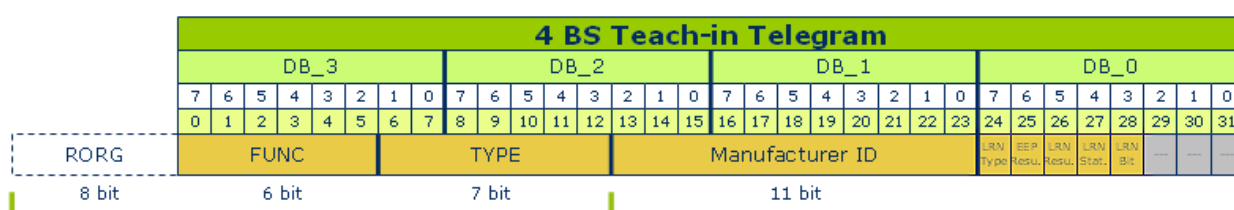

DB_3.7 ... DB_3.2:	Function: same as teach-in telegram heating valve = 20
DB_3.2 ... DB_2.3:	Type: same as teach-in telegram actuator = 11
DB_2.2 ... DB_1.0:	Manufacturer: Intesis Software ID = 0x019
DB_0.7:	LRN TYPE = 0b1 (type 1 with profile, manufacturer Id)
DB_0.6:	EEP result; EEP supported = 0b1, EEP not supported = 0b0
DB_0.5:	LRN result; ID stored = 0b1, ID deleted (not stored) = 0b0
DB_0.4:	TA: teach-in answer = 0b1
DB_0.3:	LRN Learn button
	0b0 Teach-in telegram
	0b1 Data telegram
DB_0.2 ... DB_0.0:	Not used

DATA BYTES

DB_3	Not used	
DB_2	Set Point ¹	0 ... 255 Set Point (0 ... 40°C)
DB_1	Temperature ²	255 ... 0 Temperature (0 ... 40°C)
DB_0.7 ... DB_0.4	Not used	
DB_0.3	Learn Button	0b0 Teach-in telegram
		0b1 Data telegram
DB_0.2 ... DB_0.0	Not used	

¹ Scaling with values 0 ... 40 °C only apply with profiles E and F.

² While no sensor is linked to the IntesisBox®, a value of 0xFF will be sent indicating "no valid temperature".

13. Error Codes

Error Code Modbus	Error in Remote Controller	Error category	Error Description
0	N/A		No active error
17	A0	Indoor Unit	External protection devices activated
18	A1		Indoor unit PCB assembly failure
19	A2		Interlock error for fan
20	A3		Drain level system error
21	A4		Temperature of heat exchanger (1) error
22	A5		Temperature of heat exchanger (2) error
23	A6		Fan motor locked, overload, over current
24	A7		Swing flap motor error
25	A8		Overcurrent of AC input
26	A9		Electronic expansion valve drive error
27	AA		Heater overheat
28	AH		Dust collector error / No-maintenance filter error
30	AJ		Capacity setting error (indoor)
31	AE		Shortage of water supply
32	AF		Malfunctions of a humidifier system (water leaking)
33	C0		Malfunctions in a sensor system
36	C3		Sensor system of drain water error
37	C4		Heat exchanger (1) (Liquid pipe) thermistor system error
38	C5		Heat exchanger (1) (Gas pipe) thermistor system error
39	C6		Sensor system error of fan motor locked, overload
40	C7		Sensor system of swing flap motor error
41	C8		Sensor system of over-current of AC input
42	C9		Suction air thermistor error
43	CA		Discharge air thermistor system error
44	CH		Contamination sensor error
45	CC		Humidity sensor error
46	CJ		Remote control thermistor error
47	CE		Radiation sensor error
48	CF		High pressure switch sensor
49	E0	Outdoor Unit	Protection devices activated
50	E1		Outdoor unit PCB assembly failure
52	E3		High pressure switch (HPS) activated
53	E4		Low pressure switch (LPS) activated
54	E5		Overload of inverter compressor motor
55	E6		Over current of STD compressor motor
56	E7		Overload of fan motor / Over current of fan motor
57	E8		Over current of AC input
58	E9		Electronic expansion valve drive error
59	EA		Four-way valve error
60	EH		Pump motor over current
61	EC		Water temperature abnormal
62	EJ		(Site installed) Protection device activated
63	EE		Malfunctions in a drain water
64	EF		Ice thermal storage unit error
65	H0		Malfunctions in a sensor system
66	H1		Air temperature thermistor error
67	H2		Sensor system of power supply error
68	H3		High Pressure switch is faulty
69	H4		Low pressure switch is faulty
70	H5		Compressor motor overload sensor is abnormal
71	H6		Compressor motor over current sensor is abnormal
72	H7		Overload or over current sensor of fan motor is abnormal
73	H8		Sensor system of over-current of AC input
74	H9		Outdoor air thermistor system error
75	HA		Discharge air thermistor system error
76	HH		Pump motor sensor system of over current is abnormal
77	HC		Water temperature sensor system error
79	HE		Sensor system of drain water is abnormal
80	HF		Ice thermal storage unit error (alarm)
81	F0		No.1 and No.2 common protection device operates.
82	F1		No.1 protection device operates.
83	F2		No.2 protection device operates
84	F3		Discharge pipe temperature is abnormal
87	F6		Temperature of heat exchanger(1) abnormal
91	FA		Discharge pressure abnormal
92	FH		Oil temperature is abnormally high
93	FC		Suction pressure abnormal
95	FE		Oil pressure abnormal
96	FF		Oil level abnormal

97	J0		Sensor system error of refrigerant temperature
98	J1		Pressure sensor error
99	J2		Current sensor error
100	J3		Discharge pipe thermistor system error
101	J4		Low pressure equivalent saturated temperature sensor system error
102	J5		Suction pipe thermistor system error
103	J6		Heat exchanger(1) thermistor system error
104	J7		Heat exchanger(2) thermistor system error
105	J8		Oil equalizer pipe or liquid pipe thermistor system error
106	J9		Double tube heat exchanger outlet or gas pipe thermistor system error
107	JA		Discharge pipe pressure sensor error
108	JH		Oil temperature sensor error
109	JC		Suction pipe pressure sensor error
111	JE		Oil pressure sensor error
112	JF		Oil level sensor error
113	L0		Inverter system error
116	L3		Temperature rise in a switch box
117	L4		Radiation fin (power transistor) temperature is too high
118	L5		Compressor motor grounded or short circuit, inverter PCB fault
119	L6		Compressor motor grounded or short circuit, inverter PCB fault
120	L7		Over current of all inputs
121	L8		Compressor over current, compressor motor wire cut
122	L9		Stall prevention error (start-up error) Compressor locked, etc.
123	LA		Power transistor error
125	LC		Communication error between inverter and outdoor control unit
129	P0		Shortage of refrigerant (thermal storage unit)
130	P1		Power voltage imbalance, open phase
132	P3		Sensor error of temperature rise in a switch box
133	P4		Radiation fin temperature sensor error
134	P5		DC current sensor system error
135	P6		AC or DC output current sensor system error
136	P7		Total input current sensor error
142	PJ		Capacity setting error (outdoor)
145	U0	System	Low pressure drop due to insufficient refrigerant or electronic expansion valve error, etc.
146	U1		Reverse phase, Open phase
147	U2		Power voltage failure / Instantaneous power failure
148	U3		Failure to carry out check operation, transmission error
149	U4		Communication error between indoor unit and outdoor unit, communication error between outdoor unit and BS unit
150	U5		Communication error between remote control and indoor unit / Remote control board failure or setting error for remote control
151	U6		Communication error between indoor units
152	U7		Communication error between outdoor units / Communication error between outdoor unit and ice thermal storage unit
153	U8		Communication error between main and sub remote controllers (sub remote control error) / Combination error of other indoor unit / remote control in the same system (model)
154	U9		Communication error between other indoor unit and outdoor unit in the same system / Communication error between other BS unit and indoor/outdoor unit
155	UA		Combination error of indoor/BS/outdoor unit (model, quantity, etc.), setting error of spare parts PCB when replaced
156	UH		Improper connection of transmission wiring between outdoor and outdoor unit outside control adaptor
157	UC		Centralized address duplicated
158	UJ		Attached equipment transmission error
159	UE		Communication error between indoor unit and centralized control device
160	UF		Failure to carry out check operation Indoor-outdoor, outdoor-outdoor communication error, etc.
209	60	Others	All system error
210	61		PC board error
211	62		Ozone density abnormal
212	63		Contamination sensor error
213	64		Indoor air thermistor system error
214	65		Outdoor air thermistor system error
217	68		HVU error (Ventair dust-collecting unit)
219	6A		Dumper system error
220	6H		Door switch error
221	6C		Replace the humidity element
222	6J		Replace the high efficiency filter
223	6E		Replace the deodorization catalyst
224	6F		Simplified remote controller error
226	51		Fan motor of supply air over current or overload
227	52		Fan motor of return air over current / Fan motor of return air overload
228	53		Inverter system error (supply air side)
229	54		Inverter system error (return air side)
241	40		Humidifying valve error
242	41		Chilled water valve error
243	42		Hot water valve error
244	43		Heat exchanger of chilled water error
245	44		Heat exchanger of hot water error
258	31		The humidity sensor of return air sensor

259	32		Outdoor air humidity sensor error
260	33		Supply air temperature sensor error
261	34		Return air temperature sensor error
262	35		Outdoor air temperature sensor error
263	36		Remote controller temperature sensor error
267	3A		Water leakage sensor 1 error
268	3H		Water leakage sensor 2 error
269	3C		Dew condensation error
339	M2		Centralized remote controller PCB error
345	M8		Communication error between centralized remote control devices
347	MA		Centralized remote control devices inappropriate combination
349	MC		Centralized remote controller address setting error
65535	N/A	DK-RC-MBS-1	Error in the communication of DK-RC-MBS-1 device with the AC unit

Table 13.1 Error codes

In case you detect an error code not listed, contact your nearest Daikin technical support service.

14. EnOcean Interoperability

In this section there is a list of the allowed transmission and reception EEPs and its description:

EEP Tx	EEP ¹ description
[05-02-01]	Light and Blind Control – Application Style 1
[07-02-05]	Temperature Sensor. Range 0°C to +40°C
[07-10-01]	Temperature Sensor; Set Point, Fan Speed and Occupancy Control
[07-10-03]	Temperature Sensor; Set Point Control
[07-20-10]	HVAC Components. Generic HVAC interface. Functions: Mode, vane position, fan speed, sensors and on/off
[07-20-11]	HVAC Components. Generic HVAC interface. Functions: Error control: AC Error code, Error states and disablements

Table 14.1 IntesisBox® supported transmission (Tx) EEPs

Profile Index Rx (S2)	Supported EEP
0	[05-02-xx] [05-03-xx] [06-00-01] [07-10-01] [07-10-02] [07-10-05]
1	[05-02-xx] [05-03-xx]
2	[05-02-xx] [05-03-xx] [07-10-01] [07-10-02] [07-10-04] [07-10-07] [07-10-08] [07-10-09]
3	[05-02-xx] [05-03-xx]
4	[05-02-xx] [05-03-xx] [07-10-01] [07-10-02] [07-10-03] [07-10-04] [07-10-05] [07-10-06] [07-10-0A] [07-10-10] [07-10-11] [07-10-12]
5	[07-02-05] [07-02-06] [07-10-01] [07-10-02] [07-10-03] [07-10-04] [07-10-05] [07-10-06] [07-10-07] [07-10-08] [07-10-09] [07-10-0A] [07-10-0B] [07-10-0C] [07-10-0D] [07-10-10] [07-10-11] [07-10-12] [07-10-13] [07-10-14]
6	[05-02-xx] [05-03-xx] [06-00-01] [07-30-02]
7	[05-04-01]
8	[07-07-01] [07-08-01] [07-08-02]
A	[05-02-xx] [05-03-xx]
B	[07-02-05] [07-02-06] [07-10-01] [07-10-02] [07-10-03] [07-10-04] [07-10-05] [07-10-06] [07-10-07] [07-10-08] [07-10-09] [07-10-0A] [07-10-0B] [07-10-0C] [07-10-0D] [07-10-10] [07-10-11] [07-10-12] [07-10-13] [07-10-14]
E	[07-20-10] [07-10-03] [07-20-11] ²
F	[07-20-10] [07-10-03] [07-20-11] ²

Table 14.2 IntesisBox® supported reception (Rx) EEPs

¹ EnOcean Equipment Profiles (EEP) V2.0 and v2.1

² HVAC Components (FUNC = 20) Generic HVAC interface (TYPE = 10 and 11) explained in section 12 and in EnOcean Equipment Profiles (EEP) v2.1

EEP Rx	EEP description
[05-02-xx]	Rocker Switch, 2 Rocker
[05-03-xx]	Rocker Switch, 4 Rocker
[05-04-01]	Key Card Activated Switch
[06-00-01]	Single Input Contact
[07-02-05]	Temperature Sensor. Range 0°C to +40°C
[07-02-06]	Temperature Sensor. Range +10°C to +50°C
[07-07-01]	Occupancy Sensor
[07-08-01]	Light, Temperature & Occupancy Sensor
[07-08-02]	Light, Temperature & Occupancy Sensor
[07-10-01]	Temperature Sensor; Set Point, Fan Speed and Occupancy Control
[07-10-02]	Temperature Sensor; Set Point, Fan Speed and Day/Night Control
[07-10-03]	Temperature Sensor; Set Point Control
[07-10-04]	Temperature Sensor; Set Point and Fan Speed Control
[07-10-05]	Temperature Sensor; Set Point and Occupancy Control
[07-10-06]	Temperature Sensor; Set Point and Day/Night Control
[07-10-07]	Temperature Sensor; Fan Speed Control
[07-10-08]	Temperature Sensor; Fan Speed and Occupancy Control
[07-10-09]	Temperature Sensor; Fan Speed and Day/Night Control
[07-10-0A]	Temperature Sensor, Set Point Adjust and Single Input Contact
[07-10-0B]	Temperature Sensor and Single Input Contact
[07-10-0C]	Temperature Sensor and Occupancy Control
[07-10-0D]	Temperature Sensor and Day/Night Control
[07-10-10]	Temperature and Humidity Sensor; Set Point and Occupancy Control
[07-10-11]	Temperature and Humidity Sensor; Set Point and Day/Night Control
[07-10-12]	Temperature and Humidity Sensor; Set Point Control
[07-10-13]	Temperature and Humidity Sensor; Occupancy Control
[07-10-14]	Temperature and Humidity Sensor; Day/Night Control
[07-20-10]	HVAC Components. Generic HVAC interface. Functions: Mode, vane position, fan speed, sensors and on/off
[07-20-11]	HVAC Components. Generic HVAC interface. Functions: Error control: AC Error code, Error states and disablements
[07-30-02]	Digital Input. Single Input Contact

Table 14.3 Description of reception (Rx) EEPs

15. Regulations and standards

CE conformity:

R&TTE EU-directive on Radio and Telecommunications Terminal Equipment

The general registration for the radio operation is valid for all EU countries as well as for Switzerland.

Standards:

UNE-EN 50491-3:2010
UNE-EN 60950-1:2007
UNE-EN 61000-6-2:2006
UNE-EN 61000-6-3:2007

FCC ID: SZV-STM300C
IC: 5731A-STM300C

The enclosed device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (i.) this device may not cause harmful interference and (ii.) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this equipment not expressly approved by Intesis Software may void the FCC authorization to operate this equipment.