



FS-8705-41 - Hunter Industries ACC2

DATASHEET - Rev 2

DESCRIPTION

The Hunter ACC2 gateway can be used to connect to suitably enabled Hunter Industries controllers such as the ACC2 Irrigation Controller. The Driver can read and write data, change settings and issue commands to the irrigation system. A single gateway can connect to multiple controller's using this driver.


The Gateway will be an active client in communications with the Hunter controller. This means that the gateway will issue messages to read/write data. The Hunter Controller ACC2 will be a passive server, waiting silently for messages from the gateway



QS-3XX0


to which it will respond. The data read will be cached for serving via a 2nd protocol such as DNP3 to Cimplicity or Modbus / BACnet for a building management system. Any of the over 140 protocols in the gateway library may be connected to the Hunter Driver.

TYPICAL BLOCK DIAGRAM

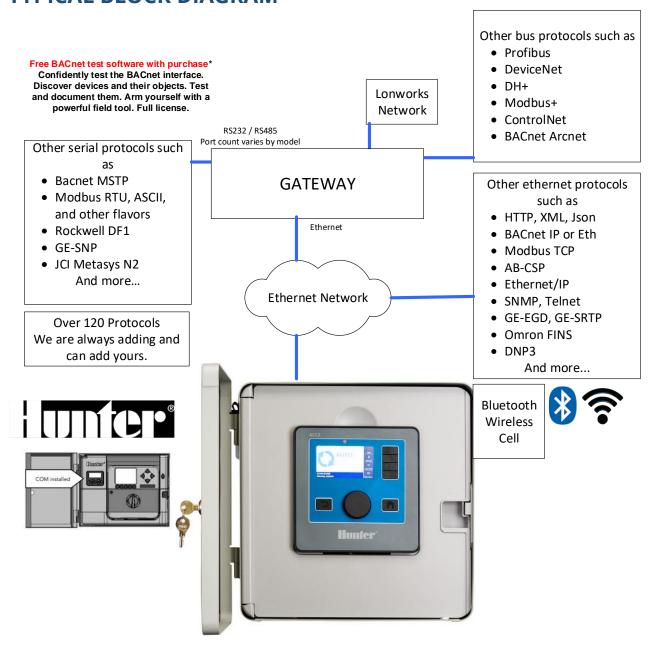


SAMPLE PROJECT BLOCK DIAGRAM

In this sample the Irrigation Sites are monitored from a central location. The Central uses DNP3 (Primary function of Central Station is Power Management). The DNP3 connection is made by means of the mobile network.

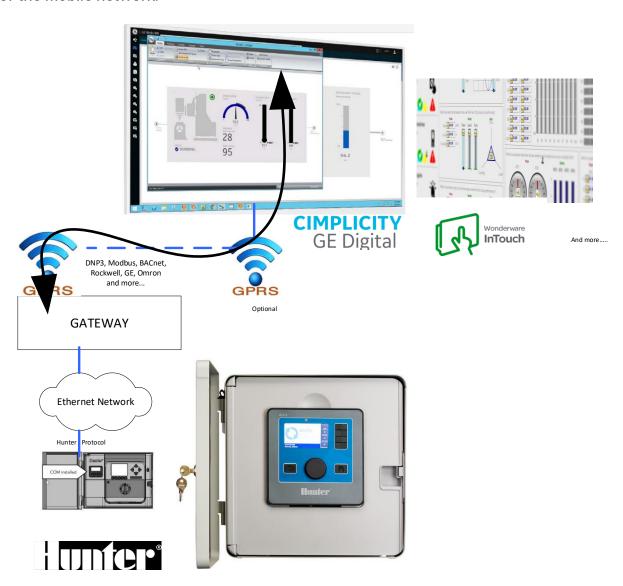

SAMPLE SCREENS SHOWING HOW DATA CAN BE USED

The following images are screenshots of a Dashboard interface to monitor and control the ACC2. This is how the data might be used for SCADA or GUI purposes. These sample screens are implemented in HTML and javascript. You can use them to learn how the data is used to build your own GUI. Or you can just use these sample pages. They are available at any time and can preinstalled on request. While we used HTML and javascript to read the gateway data using Json, we expect that in most projects protocols like Modbus or BACnet will be used and GUI software like Cimplitiy or IFix (for example) might be used.

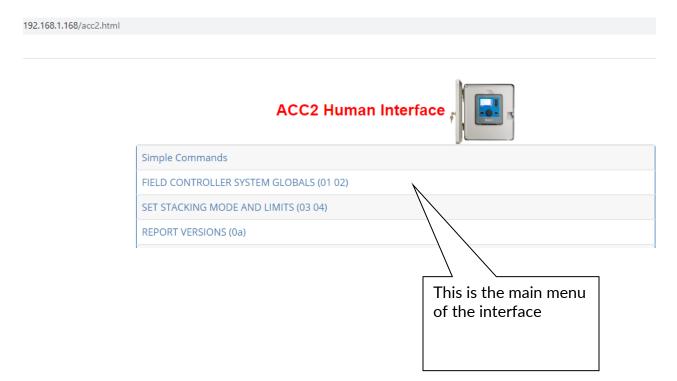

02H - Controller Global Settings

Offset	Parameter	Value
0	Firmvare Vr.	511
1	Engg. Vr.	26
2	Station Count	99
3	Hours	23
4	Minutes	11
5	Seconds	37
6	Month	10
7	Day	15
8	Year	2019
9	Sys. Event Hour	0
10	RCP hour	0
11	DST (Active/Deactive)	0
12	ETAP Schedule	1
13	ETAP schedule length	3
14	Response level	2
15	Interval (seconds)	3
16	Mode	0
17	Remains Days	0
18	Global Seasonal Adjust	0
19	Stack	1
20	Max. programs running Fore Smart Stack	1
21	Max. programs running b SG / Smart Stack	0
22	Rotary Knob	2

Example – Connect to Data objects to provide real time data for operators and

72H - Report Stations On

Offset	Parameter	,	Value
69	Station1 On		1
70	Station2 On		1
71	Station3 On		0
72	Station4 On		0
73	Station5 On		0
74	Station6 On		1
75	Station7 On		1 •
76	Station8 On		0
76	Station8 On		0

7AH - Flow Totals

Rec	Today	Yesterday	Week - todate	Week - Prev	Month - todate	Month - Prev	Year - Todate	year - Prev
Ctrlr	0	0	0	0	0	0	0	0
SSG1	0	0	0	0	0	0	0	0
SSG2	0	0	0	0	0	0	0	0
Prog 0	0	0	0	0	0	0	0	0
prog 1	0	0	0	0	0	0	0	0
prog 2	0	0	0	0	0	0	0	0
Prog 3	0	0	0	0	0	0	0	0
Prog 4	0	0	0	0	0	0	0	0
Prog 5	0	0	0	0	0	0	0	0

LIST OF SUPPORTED COMMANDS AND SERVICES

A full description of each service and the data variables each service reads, writes is available in the driver manual.

Google = "FS-8705-41 Hunter Industries ACC2 Irrigation Controller.xlsx"

Striketrough = Not Supported

If the services is not in this list then it is not supported

Services supported for ACC2 firmware as shipped by Hunter in Jan2020

Services to support older ACC2 firmware - May be available on Request

Hunter_CMD / Services Supported
0x01 – SET FIELD CONTROLLER SYSTEM GLOBALS
0x02 – REPORT FIELD CONTROLLER GLOBALS
0x03 – SET STACKING MODE AND LIMITS
0x04 – REPORT STACKING MODE AND LIMITS
0x06 – Mute
0x07 - Reset Mute
0x0A – REPORT VERSIONS
0x0C – SET FLOW OPERATION PARAMETERS
0x0D – REPORT FLOW OPERATION PARAMETERS
0x0E – REPORT ITEM INFORMATION
0x10 – SET DECODER MODULE STATION ASSIGNMENTS (v2.00.016 and later)
0x12 – SET ITEM NAMES (v2.00.016 and later)
0x13 – SET STATION PARAMETERS
0x15 - REPORT DECODER MODULE STATION ASSIGNMENTS (v2.00.016 and
later)
0x16 - Set Pump / Master Valve Param
0x17 – SET MAINSAFE PARAMETERS
0x18 – REPORT MAINSAFE PARAMETERS
0x19 – SET FLOW ZONE PARAMETERS
0x1A – REPORT FLOW ZONE PARAMETERS
0x1B – SET FLO+A694W SENSOR PARAMETERS (v2.00.033 and later)
0x1c- SET CLICK SENSOR PARAMS
0x1D – SET PROGRAM SENSOR ACTION
0x1E – SET FIELD CONTROLLER PROGRAM HEADER DATA (v2.13.000 and
Later)
0x1F – SET FIELD CONTROLLER PROGRAM EVENT RUN TIME DATA
0x20 – SET RAIN DELAY VALUES
0x21 – GET RAIN DELAY VALUES

0x23 - SET SEASONAL ADJUST VALUES

7705 11 Hanter maastres 71002 milgation
0x24 – STOP STATIONS
0x25 – REPORT SEASONAL ADJUST VALUES
0x26 – STOP A PROGRAM
0x27 – DECODER INVENTORY
0x28 – PURGE LOG RECORDS
0x2B – REPORT FLOW ZONE MONITORING DATA
0x2C – REPORT FLOW ZONE DIAGNOSTIC DATA
0x2D – REPORT MAINSAFE MONITORING DATA
0x2E – REPORT FLOW MANAGEMENT FLOW DATA
0x2F – REPORT FLOW MANAGEMENT ACTIVE STATION DATA
0x30 – REPORT CONTROLLER CURRENT DRAWS (v2.00.016 and later)
0x32 — REPORT ITEM NAMES (v.2.00.016 and later)
0x33 - REPORT STATION PARAMETERS (v.2.00.016 and later)
0x34 – Report Block Parameters
0x35 – Stop Blocks
0x36 – REPORT PUMP/MASTER VALVE PARAMETERS (v2.11.007 and later)
0x37 – Reserved for Future
0x38 – SET LEARN FLOW START/STOP TIME
0x39 – GET LEARN FLOW STATUS INFO
0x3A – Get Learn Flow Report Info
0x3B – REPORT FLOW SENSOR PARAMETERS (v2.00.033 and Later)
0x3C – REPORT CLICK SENSOR PARAMETERS
0x3D – REPORT PROGRAM SENSOR ACTION
0x3E – REPORT FIELD CONTROLLER PROGRAM HEADER DATA (v2.13.000 and
Later)
0x3F – Report Field Controller Program Event Run Time Data
0x40 - Set User Management Information
0x41 - Report User Management Information
0x42 – Set Calendar Days Off
0x43 – Get Calendar Days Off
0x4f - Report Item CRCs
0x51 – Stop Irrigation
0x51 – Stop Irrigation
0x52 – Programmable Off
0x53 – Suspend Irrigation
0x54 – Cancel Programmable Off
0x55 – Cancel Suspend
0x56 – Start Manual All Station Program
0x57 – Set System Event Mode
0x58 – Set FCP Mode

0x59 – Clear Field Controller Display Messages
0x5A – Set Pause Mode
0x5B – Cancel Pause Mode
0x5C – Start Single Manual Event
0x5D – Start Multiple Manual Events
0x5e - 0x71
0x72 – REPORT ACTIVE OUTPUTS (v2.00.025)
0x73 – REPORT ALARMS/INFORMATION
0x74 – REPORT LOG
0x75 – REPORT CURRENT FLOW DATA
0x76 – REPORT CLIK SENSOR INFORMATION
0x77 – REPORT DECODER MODULE INFORMATION (v2.00.024 and later)
0x7A – REPORT FLOW TOTALS
0x7B – REPORT FLOW DETAIL DATA
0x7C - Clear Flow Alarms
0x9A – GET CONTROLLER VERSION TYPE (v2.11.006 and later)

CLIENT SERVER MODEL & DATA FLOW

Data flow is Bi Directional. The central station will be able to read and write parameters and issue commands.

The Gateway will be an active client in communications with the Hunter controller. This means that the gateway will issue messages to read/write data. The Hunter Controller ACC99D will be a passive server, waiting silently for messages from the gateway to which it will respond. The data read will be cached for serving via DNP3 to Cimplicity


A number of **data manipulation tools** such as the ability to scale values, perform arithmetic, logic operations, bit extraction, bit packing, conversion to / from Real and Integer types etc.


This data is shared with another protocol. For example DNP3 for the power industry, BACnet for the building automation industry. Any of the over 140 protocols available in the FieldServer library can be linked. More than 2 protocols can be used in the same gateway. You could share the irrigation data with Modbus and BACnet if required.

The 2^{nd} protocol can be configured to be a server or a master or even both. So you can read Flow data and write it to another device using a protocol like Modbus. Or you can read the flow data and serve the data to a remote client using the 2^{nd} protocol

Data Objects

An Excel spreadsheet is provided with the driver that contains a listing of all the services, the data objects used to monitor and command the controller. The following images provide samples from this spreadsheet. It contains notes on how to use the service and the meaning and use of each data object.

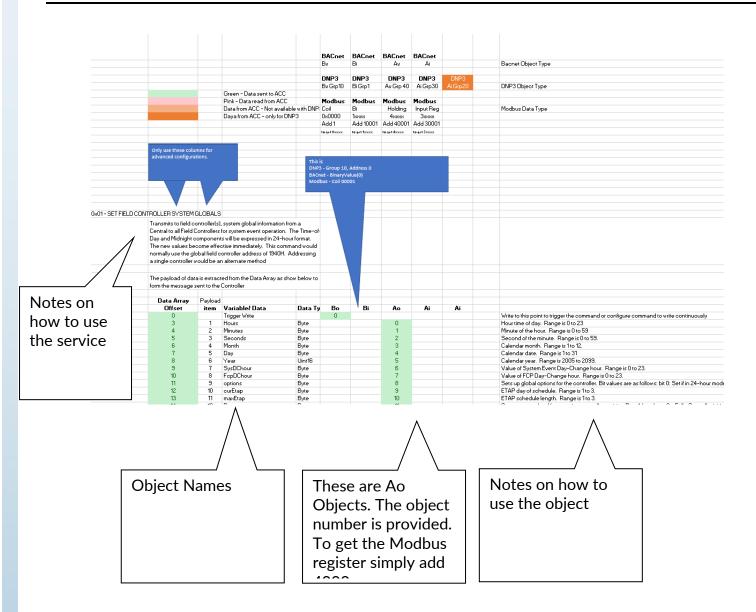

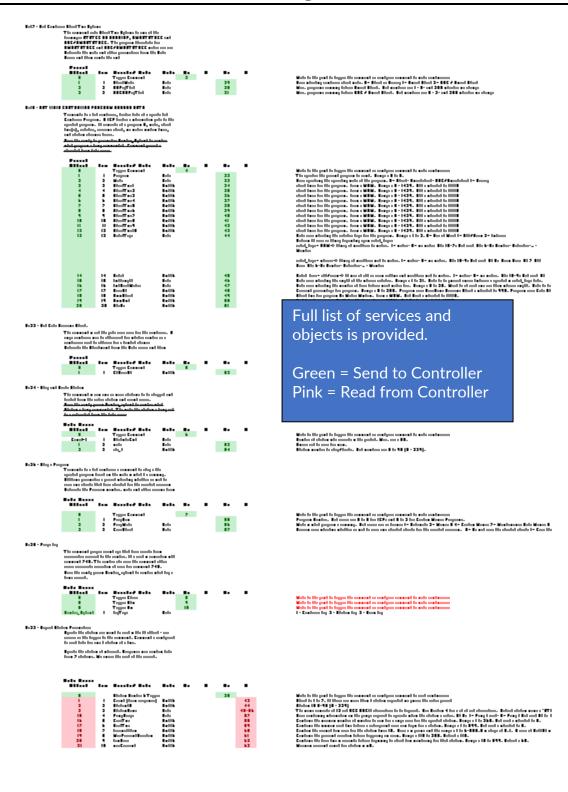

CUSTOMER SUPPORT

Hunter Industries ACC2 Driver for FieldServer was developed by Chipkin, and we are proud to provide support for our products. For technical support, sales and customer service, please call us at 1 (866) 383-1657.

Thanks for choosing Chipkin's products and integration services to meet your building and industrial automation requirements!

Chipkin[™] is a building and industrial automation protocol expert. We develop, configure, install and support gateways (protocol converters), data loggers and remote monitor and controlling applications. Founded in October 2000, Chipkin provides expert solutions for converting BACnet®, Modbus®, and LonWorks®—to name just a few—and enabling interfaces for HVAC, fire, siren, intercom, lighting, transportation and fuel systems. The high-quality products we offer (including those from other vendors) interface with Simplex[™], Notifier[™], McQuay[™], GE[™] and many others—so you can rest assured that we will select the most appropriate solution for your application.

With Chipkin you are buying a solution. Our configuration expertise in this field combined with free BACnet and other tools ensure your success; and our customer support via phone, email and remote desktop tools means that we are there when you need us. Chipkin is a small responsive company, and we live or die by the quality of our service—and with offices in two time zones—we can provide support when you need it. Give us a call now!

Sales and Customer Service

Toll Free: +1 866 383 1657 Email: salesgroup1@chipkin.com

All contents are Copyright © 2000-2021 Chipkin Automation Systems Inc. All rights reserved. This document is Chipkin Public Information

REVISION HISTORY

DATE	RESP.	DRIVER VERSION	DOCUMENT REVISION	COMMENTS
14 Feb 2019	PMC	0.00	0	Released.
22 Oct 2019	PMC	0.00	1	Updated
16 Jun 2021	YC	0.00	2	Updated to latest template