

Simplex 4100 Connections

Simplex 4100 uses an RS232 Port


Direct Connection

RS232-Tx connects to Simplex Db25-Pin3 on Simplex Com Port

RS232-Rx connects to Simplex Db25-Pin2 on Simplex Com Port

RS232-Gnd connects to Simplex Db25-Pin7 on Simplex Com Port



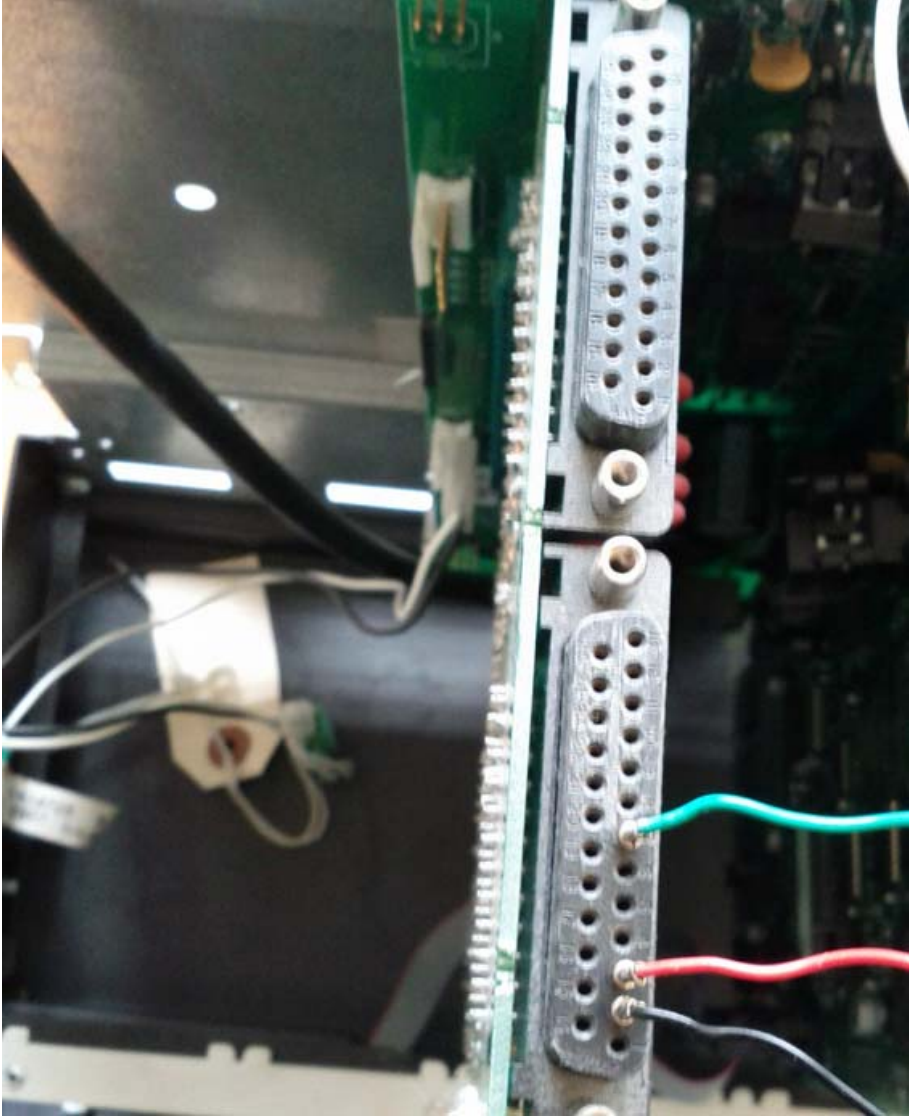

Patch Cable Connection

Cut the end off a patch cable. Cut all wires except

Orange-White, Brown, Blue-White

Connect as show below.

(White to Pin2, Blue to Pin 3, Green to Pin 7 AND

RS232-Tx connects to patch cable Orange-White

RS232-Rx connects to patch cable Brown

RS232-Gnd connects to patch cable Blue-White)

