



A Sierra Monitor Company

**Driver Manual**  
**(Supplement to the FieldServer Instruction Manual)**

**FS-8704-01 SMC TCP/IP**

**APPLICABILITY & EFFECTIVITY**

**Effective for all systems manufactured after June 2012**

Driver Version:	1.01
Document Revision:	2

**TABLE OF CONTENTS**

<b>1</b>	<b>SMC TCP/IP Description .....</b>	<b>3</b>
<b>2</b>	<b>Driver Scope of Supply .....</b>	<b>4</b>
2.1	Supplied by FieldServer Technologies for this driver .....	4
2.2	Provided by the Supplier of 3 <sup>rd</sup> Party Equipment .....	4
2.2.1	<i>Required 3<sup>rd</sup> Party Hardware .....</i>	<i>4</i>
2.2.2	<i>Required 3<sup>rd</sup> Party Software .....</i>	<i>4</i>
2.2.3	<i>Required 3<sup>rd</sup> Party Configuration .....</i>	<i>4</i>
<b>3</b>	<b>Hardware Connections.....</b>	<b>5</b>
3.1	Hardware Connection Tips / Hints.....	5
<b>4</b>	<b>Configuring the FieldServer as a SMC TCP/IP Client.....</b>	<b>6</b>
4.1	Data Arrays/Descriptors .....	6
4.2	Client Side Connection Descriptions.....	7
4.3	Client Side Node Descriptors .....	7
4.4	Client Side Map Descriptors.....	8
4.4.1	<i>FieldServer Related Map Descriptor Parameters .....</i>	<i>8</i>
4.4.2	<i>Driver Related Map Descriptor Parameters.....</i>	<i>8</i>
4.4.3	<i>Timing Parameters.....</i>	<i>8</i>
4.5	Map Descriptor Example. ....	9
<b>5</b>	<b>Configuring the FieldServer as a SMC TCP/IP Server.....</b>	<b>10</b>
5.1	Server Side Connection Descriptors .....	10
5.2	Server Side Node Descriptors .....	11

## 1 SMC TCP/IP DESCRIPTION

The SMC TCP/IP driver allows the FieldServer to transfer data to and from other FieldServers over Ethernet using SMC TCP/IP protocol. The FieldServer can emulate either a Server or Client.

The SMC TCP/IP driver can be used for inter-bridge (FieldServer to FieldServer) communications to perform tasks like mirroring data arrays between FieldServers.

### Max Nodes Supported

FieldServer Mode	Nodes	Comments
Client	N/A	Inter-bridge Communications to a virtually unlimited number of FieldServers. Memory limitations may apply when a large number of Nodes are used.
Server	N/A	Inter-bridge Communications to a virtually unlimited number of FieldServers. Memory limitations may apply when a large number of Nodes are used.

## 2 DRIVER SCOPE OF SUPPLY

### 2.1 Supplied by FieldServer Technologies for this driver

FieldServer Technologies PART #	Description
FS-8915-10	UTP cable (7 foot) for Ethernet connection

### 2.2 Provided by the Supplier of 3<sup>rd</sup> Party Equipment

#### 2.2.1 Required 3<sup>rd</sup> Party Hardware

Part #	Description
	Ethernet 10/100 BaseT hub*

#### 2.2.2 Required 3<sup>rd</sup> Party Software

None.

#### 2.2.3 Required 3<sup>rd</sup> Party Configuration


Ethernet network.

---

\* Not all FieldServer models support 100BaseT. Consult the appropriate instruction manual for details of the Ethernet speed supported by specific hardware.

### 3 HARDWARE CONNECTIONS

The FieldServer is connected to the Ethernet network as shown in the connection drawing.

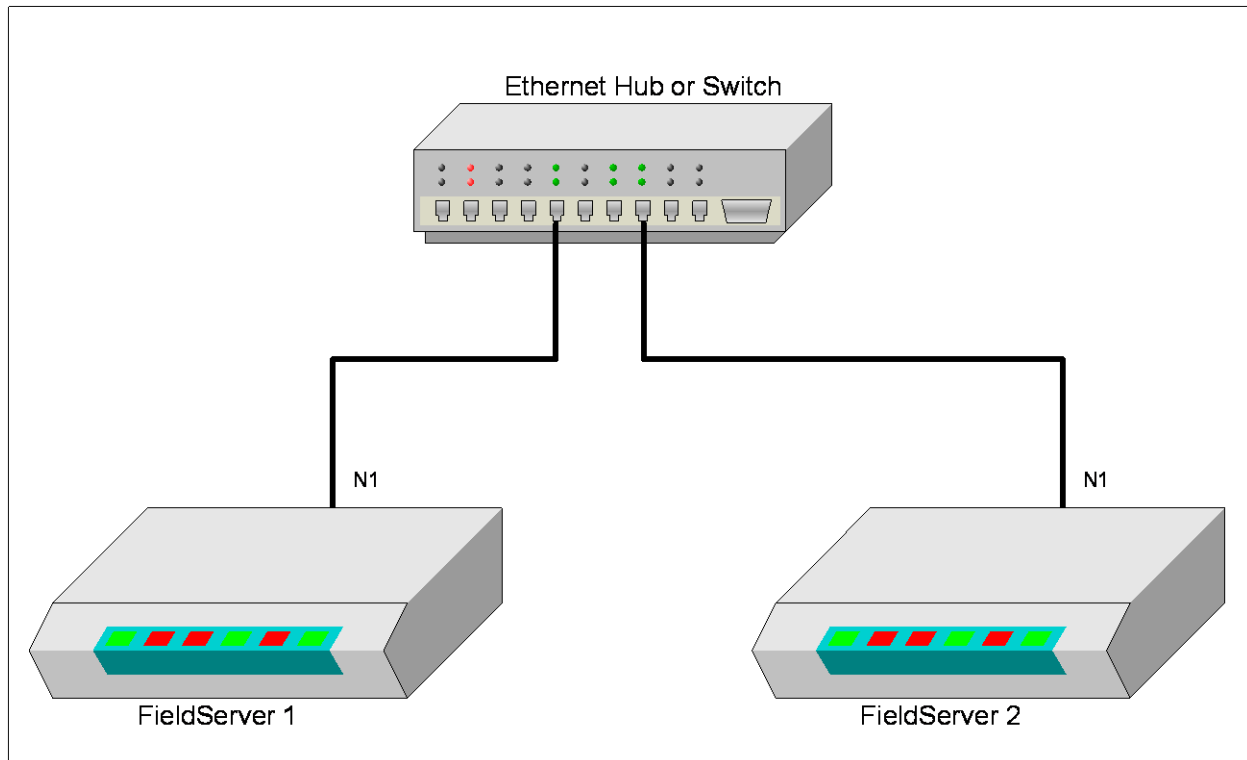

#### 3.1 Hardware Connection Tips / Hints

- Please use the appropriate category Ethernet cable, i.e. At least CAT5 for a 100Mb/s connection.
- Please note that the driver uses logical port 1024 for communication.

## 4 CONFIGURING THE FIELDSEVER AS A SMC TCP/IP CLIENT

For a detailed discussion on FieldServer configuration, please refer to the FieldServer Configuration Manual. The information that follows describes how to expand upon the factory defaults provided in the configuration files included with the FieldServer (See “.csv” sample files provided with the FieldServer).

This section documents and describes the parameters necessary for configuring the FieldServer to communicate with a SMC TCP/IP Server.

### 4.1 Data Arrays/Descriptors

The configuration file tells the FieldServer about its interfaces, and the routing of data required. In order to enable the FieldServer for SMC TCP/IP communications, the driver independent FieldServer buffers need to be declared in the “Data Arrays” section, the destination device addresses need to be declared in the “Client Side Nodes” section, and the data required from the servers needs to be mapped in the “Client Side Map Descriptors” section. Details on how to do this can be found below.

Note that in the tables, \* indicates an optional parameter, with the bold legal value being the default.

Section Title		
Data_Arrays		
Column Title	Function	Legal Values
Data_Array_Name	Provide name for Data Array	Up to 15 alphanumeric characters
Data_Array_Format	Provide data format. Each Data Array can only take on one format.	Float, Bit, UInt16, Sint16, Packed_Bit, Byte, Packed_Byte, Swapped_Byte
Data_Array_Length	Number of Data Objects. Must be larger than the data storage area required by the Map Descriptors for the data being placed in this array.	1-10,000

**Example**

```

// Data Arrays
Data_Arrays
Data_Array_Name ,Data_Array_Format ,Data_Array_Length
DA_AI_01 ,UInt16 ,200
DA_AO_01 ,UInt16 ,200
DA_DI_01 ,Bit ,200
DA_DO_01 ,Bit ,200
```

## 4.2 Client Side Connection Descriptions

Section Title		
Connections		
Column Title	Function	Legal Values
Adapter	Adapter Name	N1
Protocol	Specify protocol used	SMT

### Example

```
// Client Side Connections

Connections
Adapter          ,Protocol
N1               ,SMT
```

## 4.3 Client Side Node Descriptors

Section Title		
Nodes		
Column Title	Function	Legal Values
Node_Name	Provide name for node	Up to 32 alphanumeric characters
Node_ID	Station address of physical server node	1-65535
Protocol	Specify protocol used	SMT
Adapter	Adapter Name	N1
IP_Address	IP Address of SMT Server	IP address eg. 192.168.2.70

### Example

```
// Client Side Nodes

Nodes
Node_Name      ,Node_ID  ,Protocol  ,Adapter  ,IP_Address
Node_1         ,1        ,SMT       ,N1       ,192.168.2.70
```

## 4.4 Client Side Map Descriptors

### 4.4.1 FieldServer Related Map Descriptor Parameters

Section Title		
Map Descriptor		
Column Title	Function	Legal Values
Map_Descriptor_Name	Name of this Map Descriptor	Up to 32 alphanumeric characters
Data_Array_Name	Name of Data Array where data is to be stored in the FieldServer	One of the Data Array names from "Data Array" section above
Data_Array_Offset	Starting location in Data Array	0 to maximum specified in "Data Array" section above
Function	Function of Client Map Descriptor	RDBC, WRBC, WRBX

### 4.4.2 Driver Related Map Descriptor Parameters

Section Title		
Map Descriptor		
Column Title	Function	Legal Values
Node_Name	Name of Node to fetch data from	One of the node names specified in "Client Node Descriptor" above
Data_Type	Data type	Register, Coil, AI, DI
Target_DA_Name	Data array on remote FieldServer	Up to 15 alphanumeric characters
Target_DA_Offset	Data array on remote FieldServer	Up to 15 alphanumeric characters
Length	Length of Map Descriptor	1 - 340

### 4.4.3 Timing Parameters

Section Title		
Map Descriptor		
Column Title	Function	Legal Values
Scan_Interval	Rate at which data is polled	≥0.001s



### 4.5 Map Descriptor Example.

```
// Client Side Map Descriptors

Map_Descriptors
Map_Descriptor_Name ,Data_Array_Name ,Data_Array_Offset ,Function ,Node_name ,Data_Type ,Target_DA_Name ,Target_DA_Offset ,Length
CMD_01 ,DA_AI_01 ,0 ,RDBC ,Node_1 ,Register ,Reg_Values ,0 ,100
```

The name of the Data Array in the remote FieldServer from

## 5 CONFIGURING THE FIELDSEVER AS A SMC TCP/IP SERVER

For a detailed discussion on FieldServer configuration, please refer to the FieldServer Configuration Manual. The information that follows describes how to expand upon the factory defaults provided in the configuration files included with the FieldServer (See “.csv” sample files provided with the FieldServer).

This section documents and describes the parameters necessary for configuring the FieldServer to communicate with a SMC TCP/IP Client.

The configuration file tells the FieldServer about its interfaces, and the routing of data required. In order to enable the FieldServer for SMC TCP/IP communications, the driver independent FieldServer buffers need to be declared in the “Data Arrays” section, the FieldServer virtual node(s) needs to be declared in the “Server Side Nodes” section, and the data to be provided to the clients needs to be mapped in the “Server Side Map Descriptors” section. Details on how to do this can be found below.

Note that in the tables, \* indicates an optional parameter, with the bold legal value being the default.

### 5.1 Server Side Connection Descriptors

Section Title		
Connections		
Column Title	Function	Legal Values
Adapter	Adapter Name	N1
Protocol	Specify protocol used	SMT

#### Example

```
// Server Side Connections

Connections
Adapter          ,Protocol
N1               ,SMT
```

## 5.2 Server Side Node Descriptors

Section Title		
Nodes		
Column Title	Function	Legal Values
Node_Name	Provide name for node	Up to 32 alphanumeric characters
Node_ID	Modbus station address of physical server node	1-65535
Protocol	Specify protocol used	SMT
Server_Hold_Timeout*	Specifies time FieldServer will reserve server side connection while waiting for the Client side to update data in Data_Array (if necessary)	>1.0s

### Example

```
// Server Side Nodes

Nodes
Node_Name      ,Node_ID      ,Protocol  *
Node_1         ,1                ,SMT
```

Note that there are no Server map descriptors for this driver since the targets are Data Arrays.

Make sure the target Data Arrays exist on the target FieldServer.

---

\* Note that no connection information is necessary on Server side

THIS PAGE INTENTIONALLY LEFT BLANK